


# ARTHUR

## FOLLOWSPOT

Manual

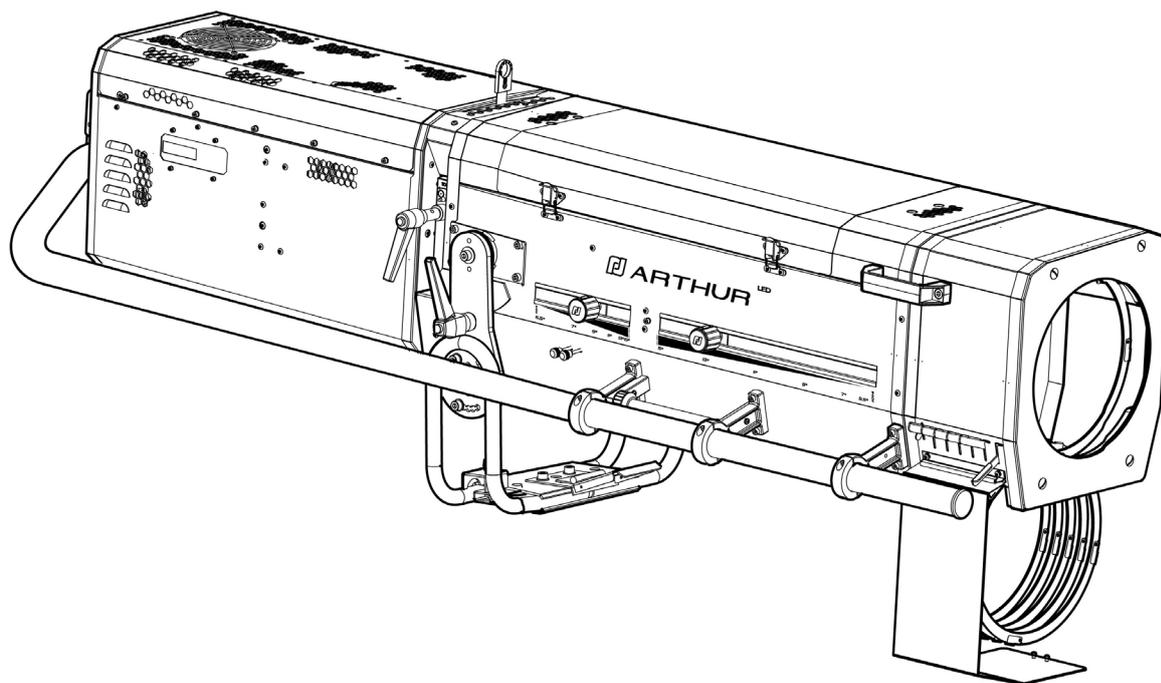

Model	Standard	North American
5.5° - 15°	ARTHUR 1014	ARTHUR 1014C

## 800W LED FOLLOWSPOT

V1

VALIDATION : 08/10/20

**DN41195800**



**ROBERT JULIAT**

# Table of Contents

<b>1</b>	<b>User's instructions</b>	<b>1</b>
<b>2</b>	<b>Presentation</b>	<b>2</b>
2.1	Functions	2
2.2	Identification label	3
2.3	Accessories included	3
2.4	Accessories	4
<b>3</b>	<b>Set-up</b>	<b>5</b>
3.1	Mechanics	5
3.1.1	Operating positions	5
3.1.2	Minimum distance between a flammable material and the lighting unit	5
3.1.3	Instructions for use	5
3.1.4	Handling	5
3.1.5	Lifting	5
3.1.6	Yoke adjustment	6
3.1.7	Stand set-up	6
3.2	Electrical information	7
3.2.1	LED source	7
3.2.2	Power supply	7
3.3	Data	8
3.3.1	DMX 512-A / RDM	8
3.3.2	Art-Net / sACN	9
3.4	Accessories	10
3.4.1	Full closing iris cassette	10
3.4.2	Colour changer unit - boomerang	10
3.4.3	Colour changer unit - push-pull	11
3.4.4	Gobo holder	11
3.4.5	Frosted / Correction filter (option)	12
3.4.6	Internal glass holder 120 x 120 mm (option)	12
3.4.7	Stands (option)	13
3.4.8	Telrad followspot sight (option)	13
3.4.9	RJ cable strap	13
3.4.10	Flight-case (option)	14
<b>4</b>	<b>Operations</b>	<b>15</b>
4.1	Light intensity	15
4.1.1	Range	15
4.1.2	Control	15
4.1.3	Parameters	15
4.1.3.1	Dimming resolution	15
4.1.3.2	Dimming curve	15
4.1.3.3	Master control	16
4.1.3.4	Set maximum position	16
4.1.3.5	Dimming mode	16
4.2	Strobe	17
4.2.1	Range	17
4.2.2	Control	17
4.3	Response time	17
4.3.1	Range	17
4.3.2	Control	17
4.4	Range	18
4.4.1	Range	18
4.4.2	Control	18
4.5	Pan / Tilt	19
4.5.1	Range	19
4.5.2	Control	19
4.6	Iris	20
4.6.1	Range	20
4.6.2	Control	20
4.7	Gobo	20
4.7.1	Range	20
4.7.2	Control	20
4.8	Colour	21
4.8.1	Range	21
4.8.2	Control	21
4.9	Frost and correction filters	22
4.9.1	Range	22
4.9.2	Control	22
<b>5</b>	<b>Controls and parameters</b>	<b>23</b>
5.1	Local display and controls	23
5.1.1	Display	23
5.1.2	Home screen	23
5.1.3	Menu	24
5.1.4	Parameters	25
5.1.4.1	Intensity	25
5.1.4.2	Auto-OFF	25
5.2	DMX512 - A remote control	26
5.2.1	Protocol	26
5.2.2	Configuration	26
5.2.3	Parameters	26
5.2.3.1	DMX Hold	26
5.2.4	DMX chart	27
5.2.5	DMX ranges	27
5.2.5.1	Strobe duration	27
5.2.5.2	Strobe speed	27
5.2.5.3	Response time	27
5.2.5.4	Control mode	27
5.3	RDM remote control	28
5.3.1	Protocol	28
5.4	Art-Net remote control	29
5.4.1	Protocol	29
5.4.2	Configuration	29
5.5	sACN remote control	30
5.5.1	Protocol	30
5.5.2	Configuration	30
5.6	Fan cooling modes	31
5.6.1	Range	31
5.6.2	Control	31
5.7	Local potentiometer	32
<b>6</b>	<b>Service</b>	<b>33</b>
6.1	Preventive maintenance	33
6.1.1	Frequency	33
6.1.2	General cleaning	33
6.1.3	General visual check	33
6.1.4	LED source	33
6.1.5	Optics	33
6.1.6	LED house cleaning	33
6.2	Analysis	34
6.3	Electronic thermal management system	34
6.4	Firmware update	35
6.5	Factory defaults	35

## GENERAL INSTRUCTIONS

1. Not for residential use.
2. **These fixtures must only be serviced by a qualified technician.**
3. In addition to the instructions indicated on this page, relevant health and safety requirements of the appropriate EU Directives must be adhered to at all times.
4. This fixture is in compliance with section 17 - Lighting appliance for theatre stages, television, cinema and photograph studios. Standards NF EN 60598-1, NF EN 60598-2-17, Low Voltage Directive 2014/35/UE & EMC Directive 2014/30/UE.
5. This fixture is rated as IP20, and is for indoor use only.

## FIXTURE

6. Ensure fixture is correctly mounted on an appropriate support.
7. Protection screens and lenses must be replaced in the event of any damage, such as cracks or deep scratches, since these might reduce performance.
8. When hung or flown the fixture must be secured by an additional hanging accessory (such as a safety cable or bond) of suitable length.
9. Safety bonds or cables must be securely attached to the back of the fixture and be as short as possible, or rolled up as necessary, to minimise travel distance should the fixture be dislodged.
10. Movable accessories (scroller, etc.) must also be secured with a suitable safety cable or bond at the front of the fixture.
11. The combined weight of both the fixture and the accessories must be considered when choosing the load-bearing capability of safety cable or bond.
12. Do not open lighting fixture when the source is on.
13. **WARNING:** LED source become hot during use. Allow fixture to cool before servicing.
14. Do not tamper with design of fixture nor any of its safety features.
15. Tighten electrical mains cable connections regularly and replace with one of identical specification if damaged.
16. Use only with correct power supply.

## VENTILATION

17. Keep well away from flammable material.
18. Not for outdoor use. Do not cover. Do not permit fixture to get wet.
19. To avoid overheating, do not obstruct air vents.
20. Ensure any cooling fans are in correct working order. If fans are not working, turn fixture off immediately and service as necessary.

## CLEANING

21. Do not touch the LED source with your fingers.
22. To clean the optical parts, use a soft cloth in combination with distilled water or isopropyl alcohol recommended for coated optics. Do not use any cleaning product that contains solvents or abrasives, as these can cause surface damage. Dry with a soft lint-free cloth.
23. Regularly remove dust with a soft lint-free cloth.
24. If the fixture has filters, they must be cleaned frequently.

## POWER SUPPLY


25. Disconnect from the mains before servicing.
26. Mains connection only. Do not connect to "electronic output" such as dimmer.
27. Ensure power supply circuit breakers, always remain accessible.

## PLEASE NOTE

This product has been built to conform to European standards relating to professional lighting equipment. Any modification made to our products will void the manufacturers' warranty.

## 2 Presentation


### 2.1 Functions

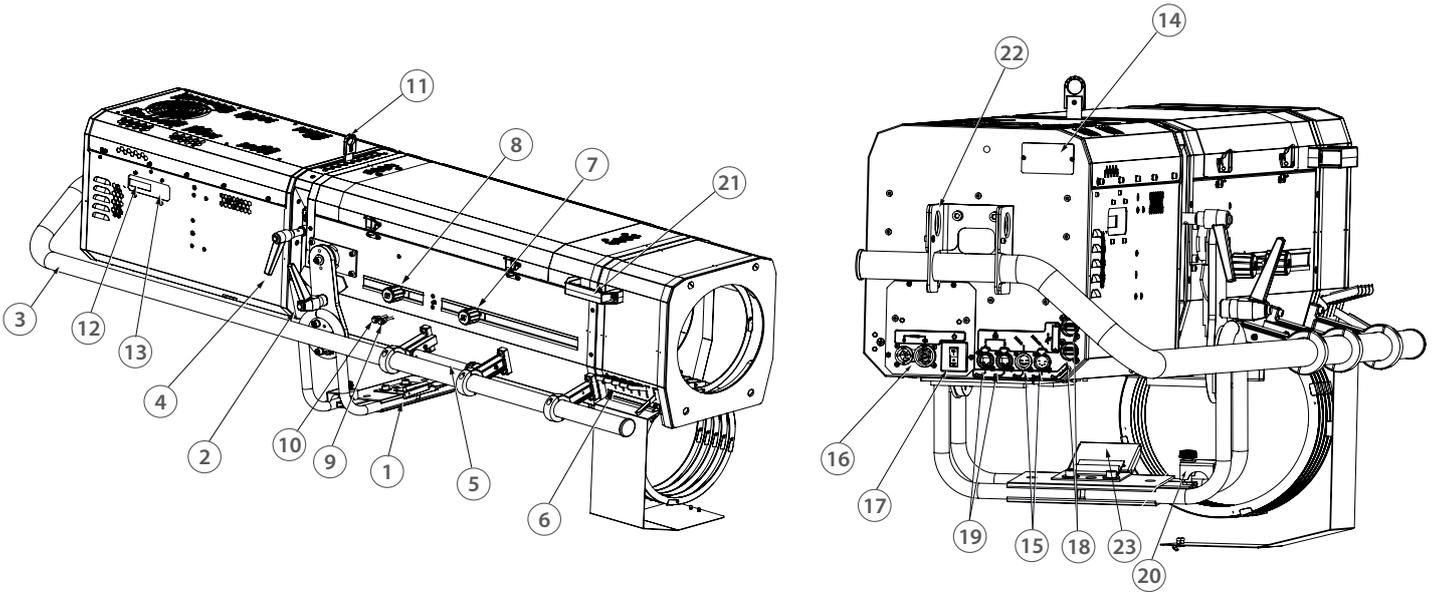

Functions	
1. Yoke	12. Local display
2. Tilt locking handle	13. Keypad
3. Side operating handle	14. Identification plate
4. Iris control	15. Data connectors (OUT and IN)
5. Dimming control	16. Power connectors (IN and OUT)
6. Colour changer	17. Power switch (thermal breaker)
7. Focus adjustment	18. USB connectors for accessories
8. Zoom adjustment	19. RJ45 connectors
9. Frost glass	20. Cable lock
10. Spare filter	21. Handles
11. Gobo holder	22. Lifting rings
	23. Tilt stopper


Description	
<p><b>LED FIXTURE</b> Risk Group </p> <p>Lire le manuel avant utilisation - Utilisation et maintenance par professionnel uniquement / Read manual before use - Service only by qualified personnel.</p> <p>MOD. <b>1</b> VERS. <b>2</b> <b>11</b> <b>9</b></p> <p>U <b>3</b> I <b>4</b> <b>10</b></p> <p>P <b>5</b> IP <b>6</b></p> <p>t<sup>a</sup> <b>7</b> t<sup>c</sup> <b>8</b> </p> <p><b>ROBERT JULIAT.com</b> Made in the EU - France -  <b>12</b> </p> <p><b>Units :</b>                  - Weight = kilogram (kg).                  - Intensity = Ampere (A).                  - Voltage = Volt (V).                  - Frequency = Hertz (Hz).                  - Temperature = degree Celsius (°C).</p>	<ol style="list-style-type: none"> <li>1. MOD. : Model</li> <li>2. VERS. : Version</li> <li>3. U : Nominal voltage input (V)</li> <li>4. I : Nominal intensity (A)</li> <li>5. P : Maximum power input (W)</li> <li>6. IP : International Protection Rating</li> <li>7. t<sup>a</sup> : Maximum ambient temperature (°C)</li> <li>8. t<sup>c</sup> : Maximum external temperature of the unit (°C)</li> <li>9. Net weight (kg)</li> <li>10. Minimum distance between a flammable material and the lighting unit (m)</li> <li>11. Colour temperature version</li> <li>12. Serial number</li> <li>13. Replace broken glass</li> <li>14. Class 1 product label</li> <li>15. Read manual first label</li> <li>16. European conformity label</li> <li>17. WEEE directive label</li> <li>18. EN62471 - Risk group</li> <li>19. CEI-TR-62778 - Do not stare at light source</li> </ol>

2.3 Accessories included

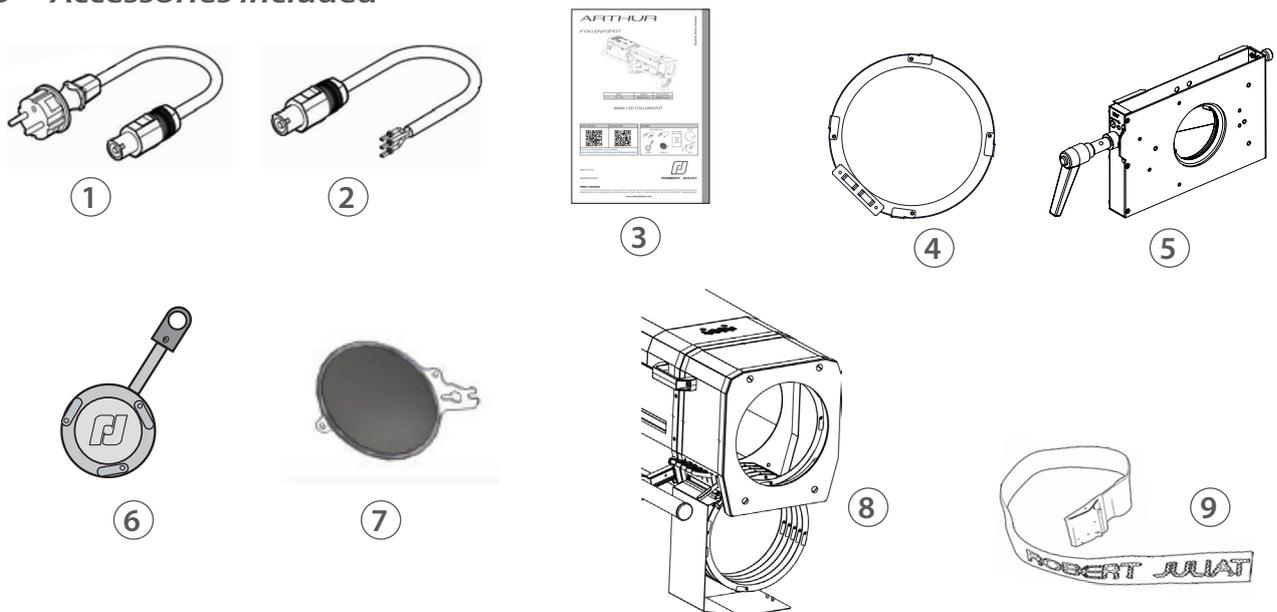

Reference	Description
1 CAL03	3 meter power cable (3G1,5 HO7RNF) with Neutrik PowerCon© True1 TOP and CEE 7/7 (2P+T NF/SCHUKO) connectors (standard version)
2 CAL04	1,50m power cable UL/CSA with Neutrik® powerCON TRUE1 TOP connector (North American version)
3 DN41195900	Quick Start manual
4 PF1013	Ø270 mm metal filter holder (x6)
5 CCU1	Full closing iris cassette - Ø72mm
6 SGUP2	Universal "A" size gobo-holder (metal, glass, frosted glass)
7 VDM120	Ø120mm frosted glass with holder
8 M270/2B	6-way "boomerang" colour changer
9 SAC1	RJ cable strap (25 x 500 mm) (x1)

## 2.4 Accessories

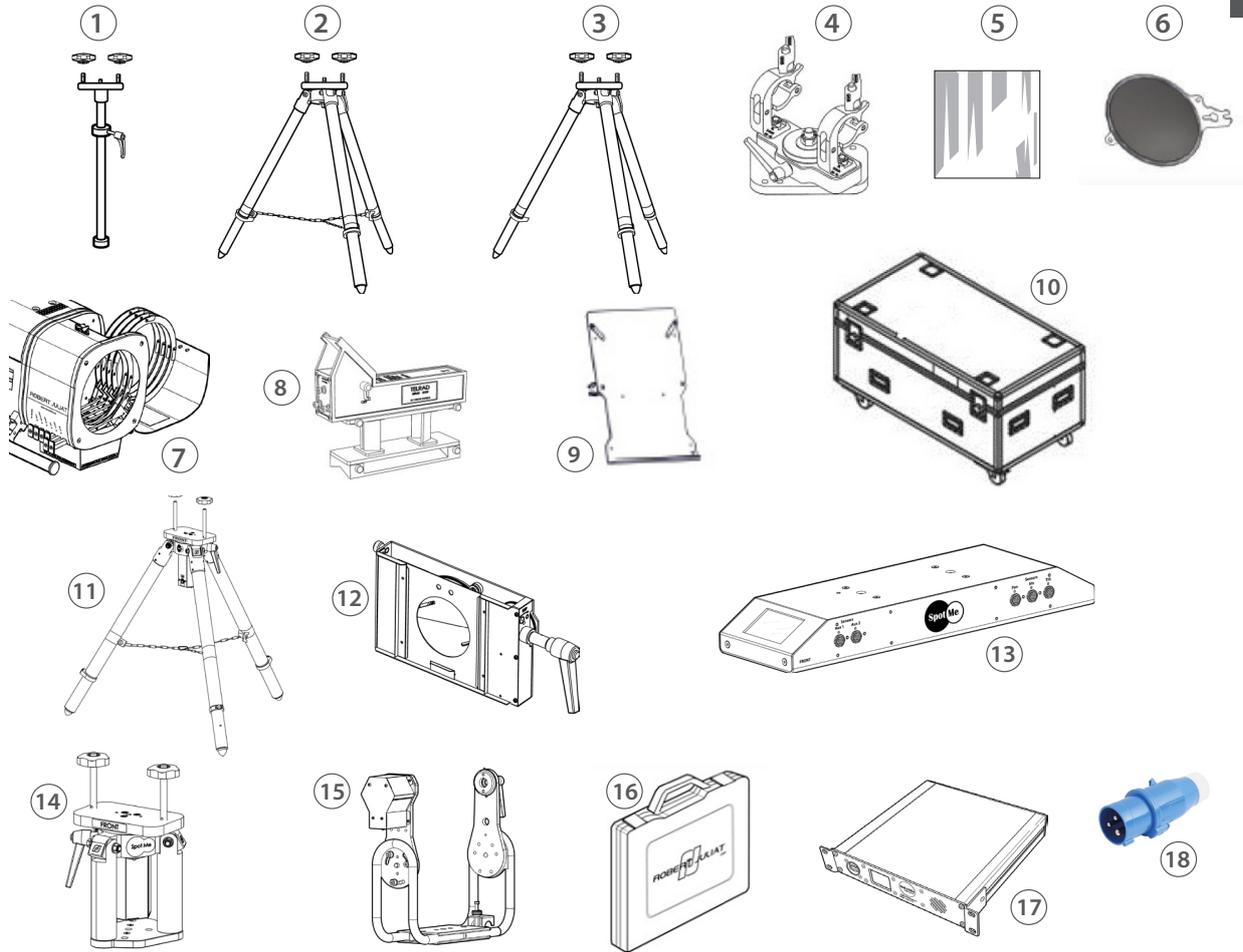


	Reference	Description
1	JPP	Monopod stand for overhead followspot
2	GT4000	Tripod stand with safety chain - SWL: 130 Kg - max. height: 1030 mm
3	GT4000S	Tripod stand without safety chain - SWL: 130 Kg - max. height: 1030 mm
4	T4000	Followspot mount for Ø50 mm pipe (suspension or overhead) - SWL= 100 Kg
5	VD120	120x120mm frosted glass
6	FCM120/2	Ø120 mm 1/2 CTO correction filter (Rosco #3408) with holder
7	M270/2TM	6-way "Push/Pull" colour changer
8	Kit TELRAD	Telrad followspot sight with raiser and universal mounting kit
9	SDUP	Followspot cue sheet holder with universal mounting kit
10	FC1014/S	Flight-case for LLT range / GT stand / accessories
11	GT4000RSM	Tripod stand with safety chain - SWL: 130 Kg - max. height: 1030 mm (equipped with PAN sensor)
12	CCU1SM	Full closing iris cassette with position sensor for SpotMe system Ø72 mm
13	SMS	SpotMe server + 2 sensor cables + flight case
14	T4000RSM	Followspot mount with ball head rotation and SpotMe PAN sensor SWL = 100 Kg - Weight: 8,83 Kg
15	FRO/SMCPD	Heavy duty adjustable yoke equipped with TILT SpotMe sensor (C type)
16	TCSM	SpotMe calibration tool kit
17	Maestro	Maestro server for SpotMe - rackable unit: 1U - half 19"
18	PCP1716A	16A blue 2P+E 6h IEC60309 power connector (option)


### 3 Set-up

#### 3.1 Mechanics

##### 3.1.1 Operating positions

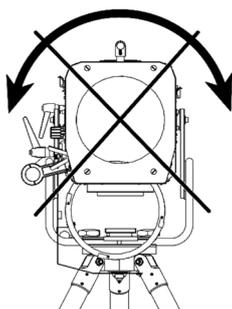

##### 3.1.2 Minimum distance between a flammable material and the lighting unit

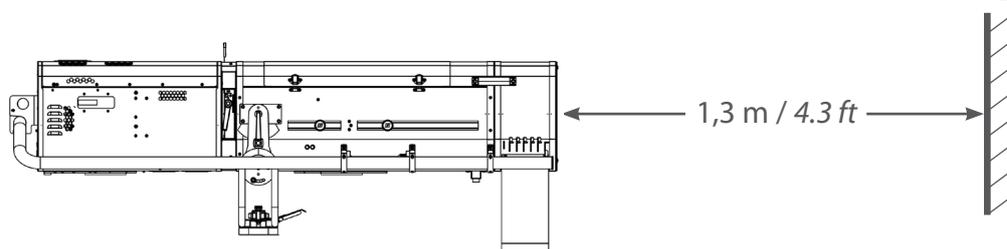

##### 3.1.3 Instructions for use




Minimum: 5°C  
40°F



Maximum: 40°C  
104°F


IP20 - Indoor use only

##### 3.1.4 Handling

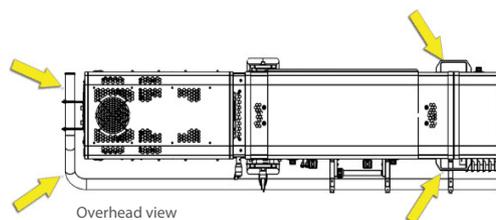


##### 3.1.5 Lifting

- Net weight:  
68.8 Kg (151.4 lbs)

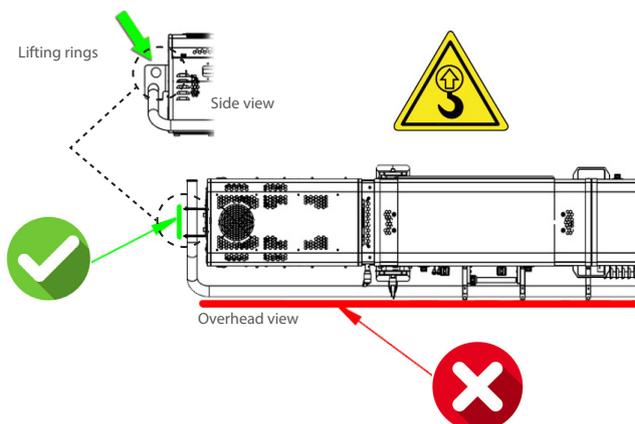

### 3.1.6 Yoke adjustment

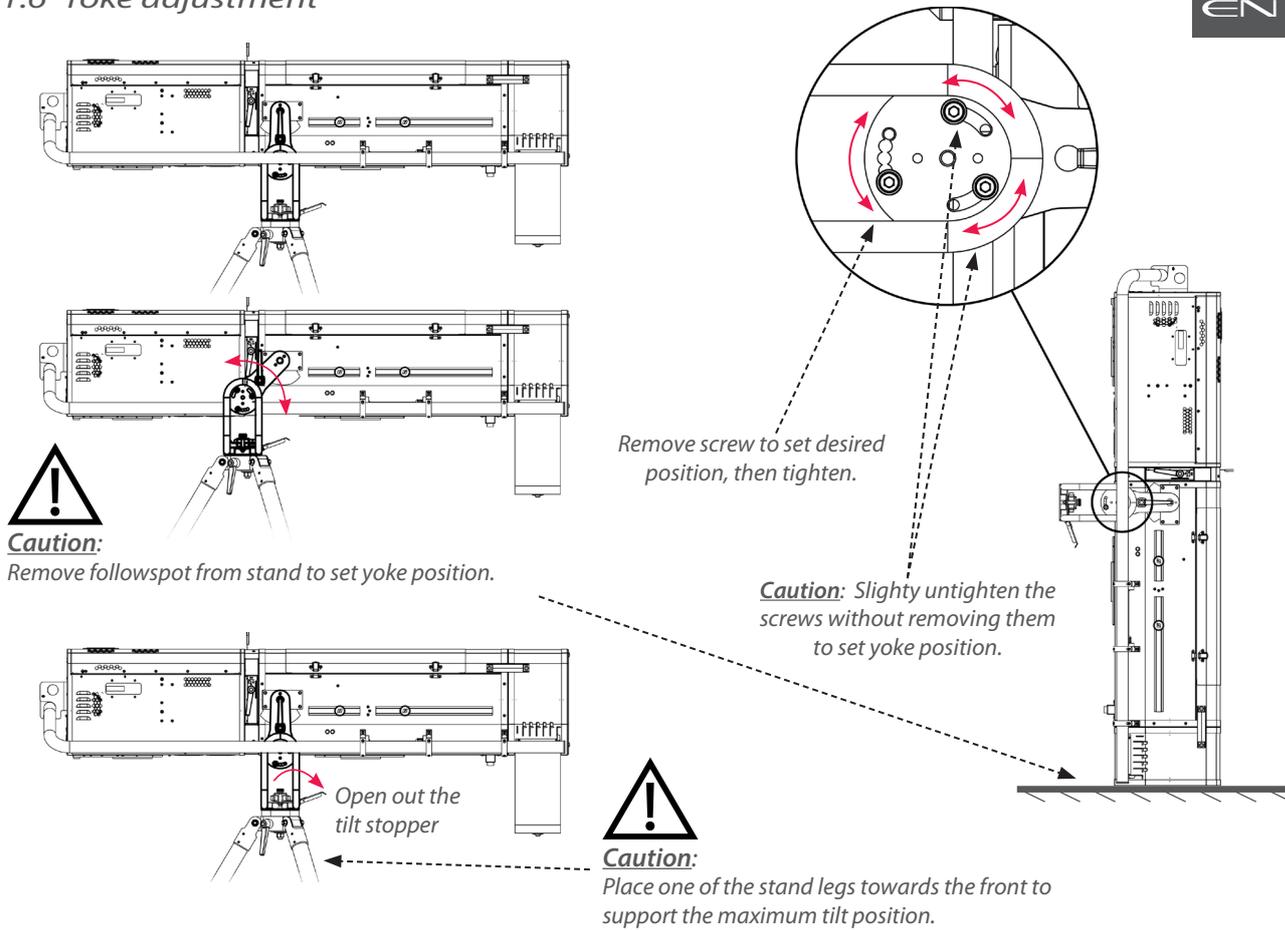


### 3.1.7 Stand set-up

The unit must be installed only on a Robert Juliat compatible stand / head :	
JPP	Monopod stand for overhead followspot
GT4000	Tripod stand with safety chain - SWL: 130 Kg - max. height: 1030 mm
GT4000S	Tripod stand without safety chain - SWL: 130 Kg - max. height: 1030 mm
T4000	Followspot mount for Ø50mm pipe (suspension or overhead) - SWL= 100 Kg
GT4000RSM	Tripod stand with ball head rotation with safety chain and SpotMe PAN sensor - SWL: 130 Kg - max. height: 1030 mm
T4000RSM	Followspot mount with ball head rotation and SpotMe PAN sensor - SWL= 100 Kg

• GT4000 & GT4000S

Please refer to the relevant stand technical files for further details.

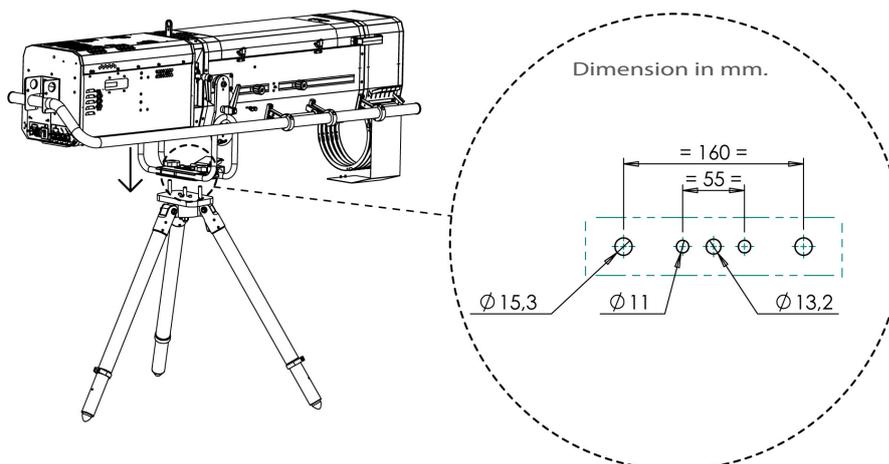


### 3.2 Electrical information

#### 3.2.1 LED source




**Never touch or scratch the LED surface.**  
Cf. 6.1.4 LED cleaning procedure if cleaning is necessary.

#### 3.2.2 Power supply

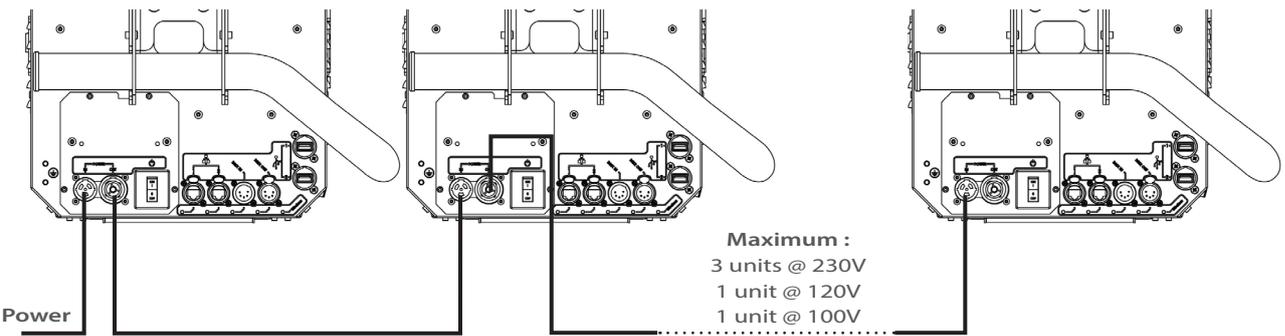Power supply			
Voltage	Frequency	Input power	Connectors
100 → 240 V	50-60 Hz	4,3 A / 960 W @ 230V 8,7 A / 1030 W @ 120V 10,7 A / 1080 W @ 100V	Neutrik powerCON TRUE1 TOP Input : ref. NAC3FPX-TOP
 <ul style="list-style-type: none"> <li>• Class 1 product. <b>This luminaire must be earthed.</b></li> <li>• Must be connected directly to AC power. <b>Do not connect to dimmer power.</b></li> <li>• Automatic mains voltage detection.</li> </ul>			
<p>Daisy chain:</p>  <p>Maximum : 3 units @ 230V 1 unit @ 120V 1 unit @ 100V</p>			

Power cable						
Power cable	Connector	Mains plug	Cable type	Cable length	Wiring	
1	Standard version	CEE7/7	3G1.5 H07RNF	3 m 9.8 ft	Live: Brown Neutral: Blue Ground: Yellow/Green	
2	North American version		-	14AWG SJ TYPE (UL/CSA)	1.5 m 4.9 ft	Live: Black Neutral: White Ground: Green
						

**Power ON**

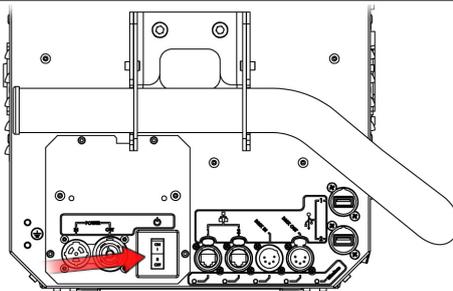

**3.3 DATA**


**3.3.1 DMX 512-A / RDM**

Protocol	Input connector	Output connector
USITT DMX 512-A RDM	XLR 5-pin	XLR 5-pin

**DATA connectors**

PIN #	DMX	Description	
1	Shielding	Foil & Braided Shield	<p>DMX IN DMX OUT</p>
2	DMX (-)	1 <sup>st</sup> conductor of 1 <sup>st</sup> twisted pair	
3	DMX (+)	2 <sup>nd</sup> conductor of 1 <sup>st</sup> twisted pair	
4	Not used	1 <sup>st</sup> conductor of 2 <sup>nd</sup> twisted pair	
5	Not used	2 <sup>nd</sup> conductor of 2 <sup>nd</sup> twisted pair	

**Daisy chain:**

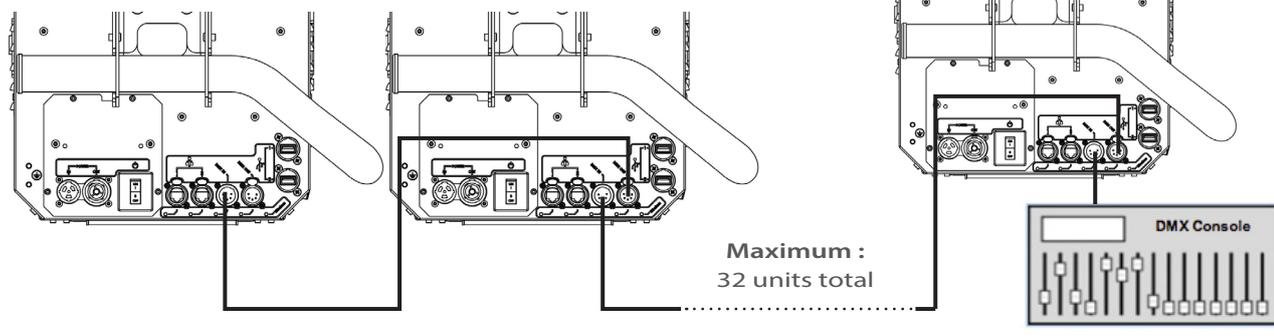

### 3.3.2 Art-Net / sACN

- With external switch

Protocol	Input connector	Output connector
Art-Net sACN	RJ45 #1 or #2	-

Daisy chain:

Art-Net sACN

DMX Console

Network switch\*

(\*) A 1000 base-T switch that supports IGMP (Internet Group Management Protocol) is necessary if the unit is connected to a network switch to control multiple devices. The usage of non IGMP switch capability can cause erratic behavior of all connected devices.  
For further reading: [https://en.wikipedia.org/wiki/Internet\\_Group\\_Management\\_Protocol](https://en.wikipedia.org/wiki/Internet_Group_Management_Protocol)

- With integrated switch

Protocol	Input connector	Output connector
Art-Net sACN	RJ45 #1	RJ45 #2

Daisy chain:


Art-Net sACN

DMX Console


⚠ all units must be powered

Integrated switch specifications: 100 base-T unmanaged


3.4.1 Full closing iris cassette

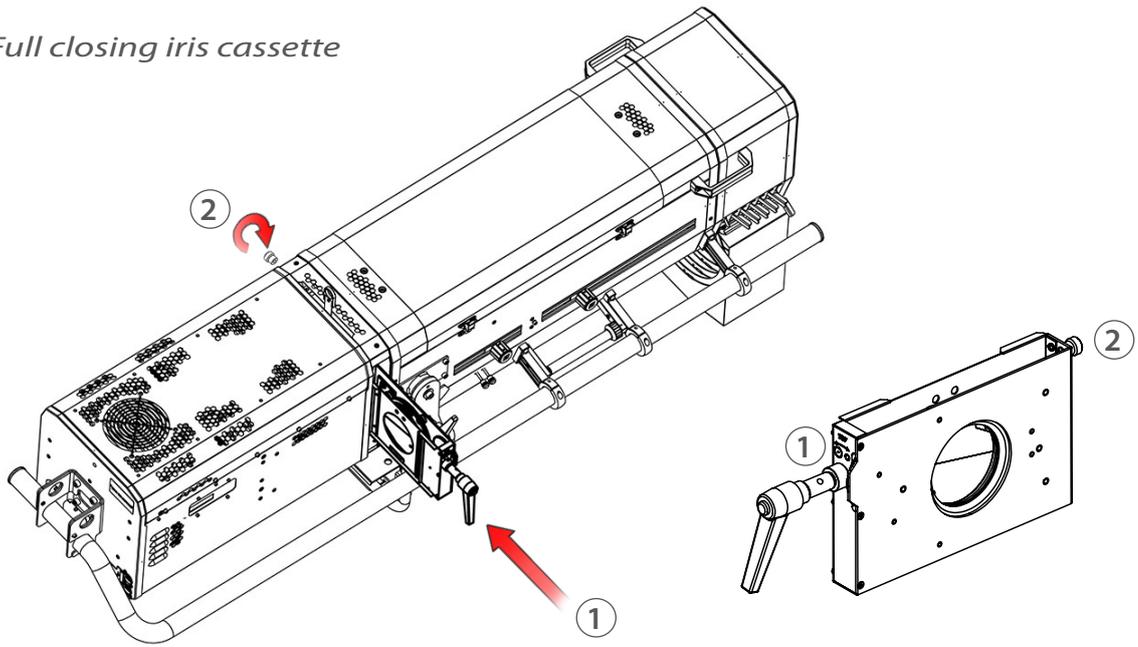

3.4.2 Colour changer unit - boomerang

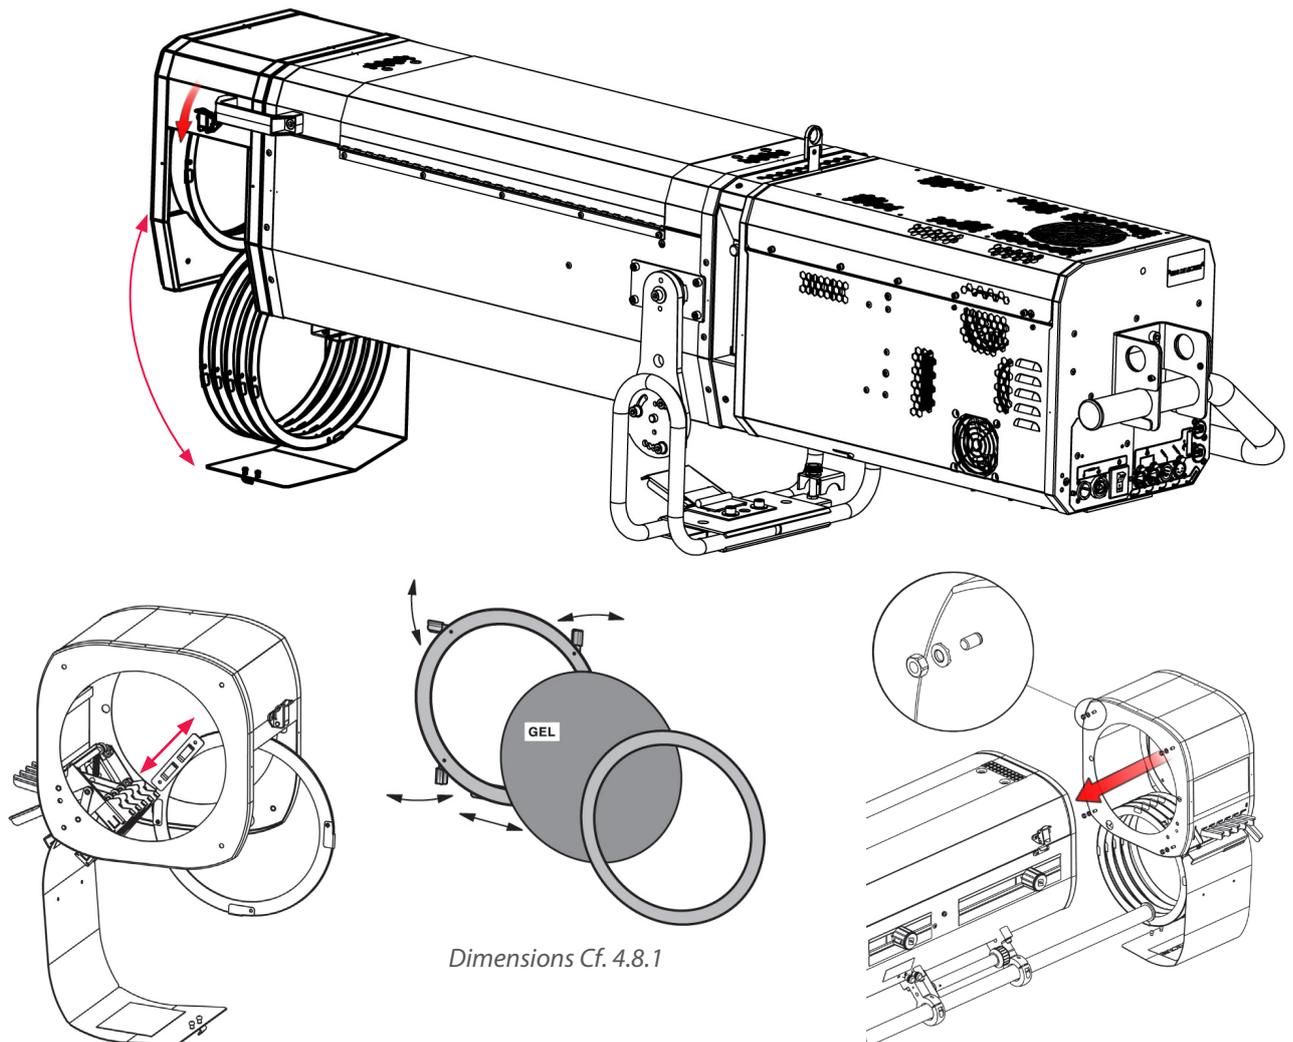


### 3.4.3 Colour changer unit - push-pull

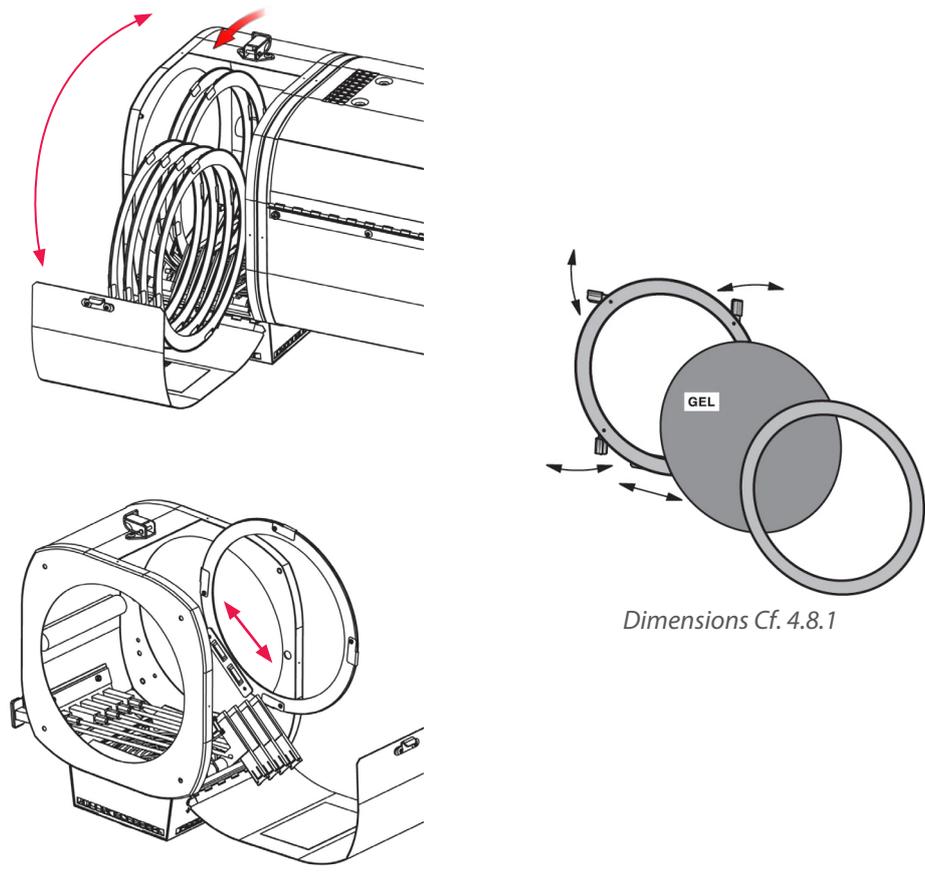


Dimensions Cf. 4.8.1

### 3.4.4 Gobo holder

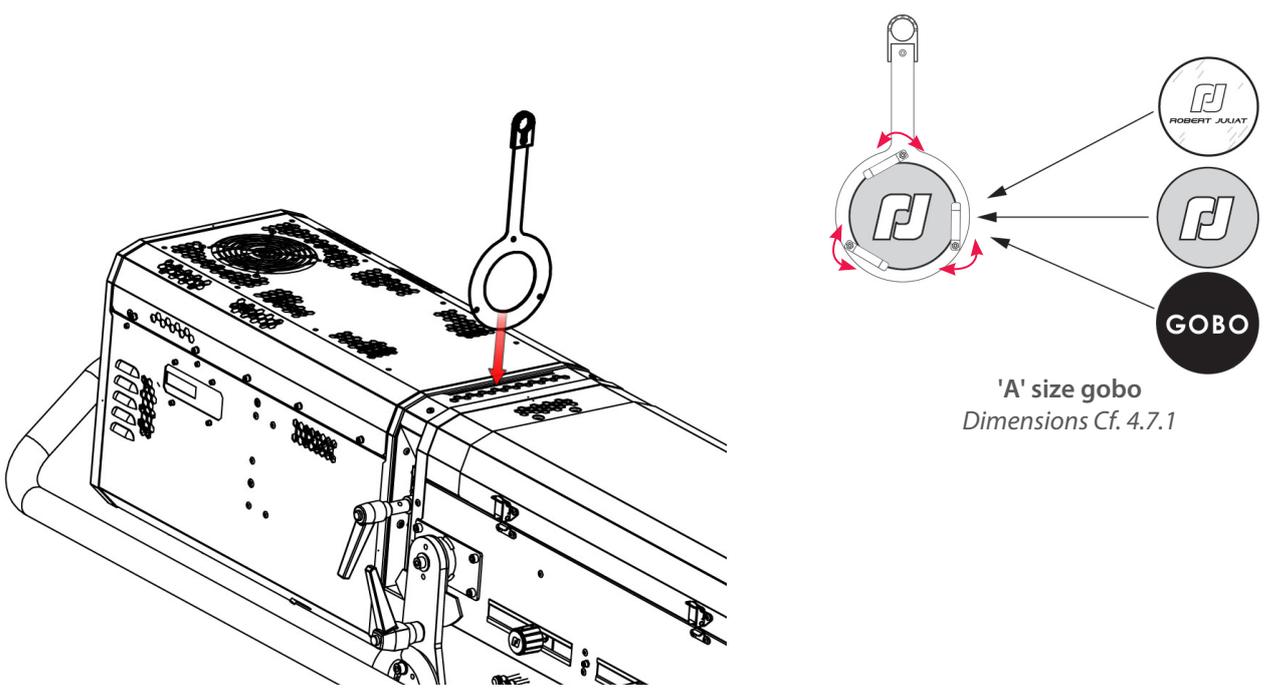


'A' size gobo  
Dimensions Cf. 4.7.1

### 3.4.5 Frosted / Correction filter (option)

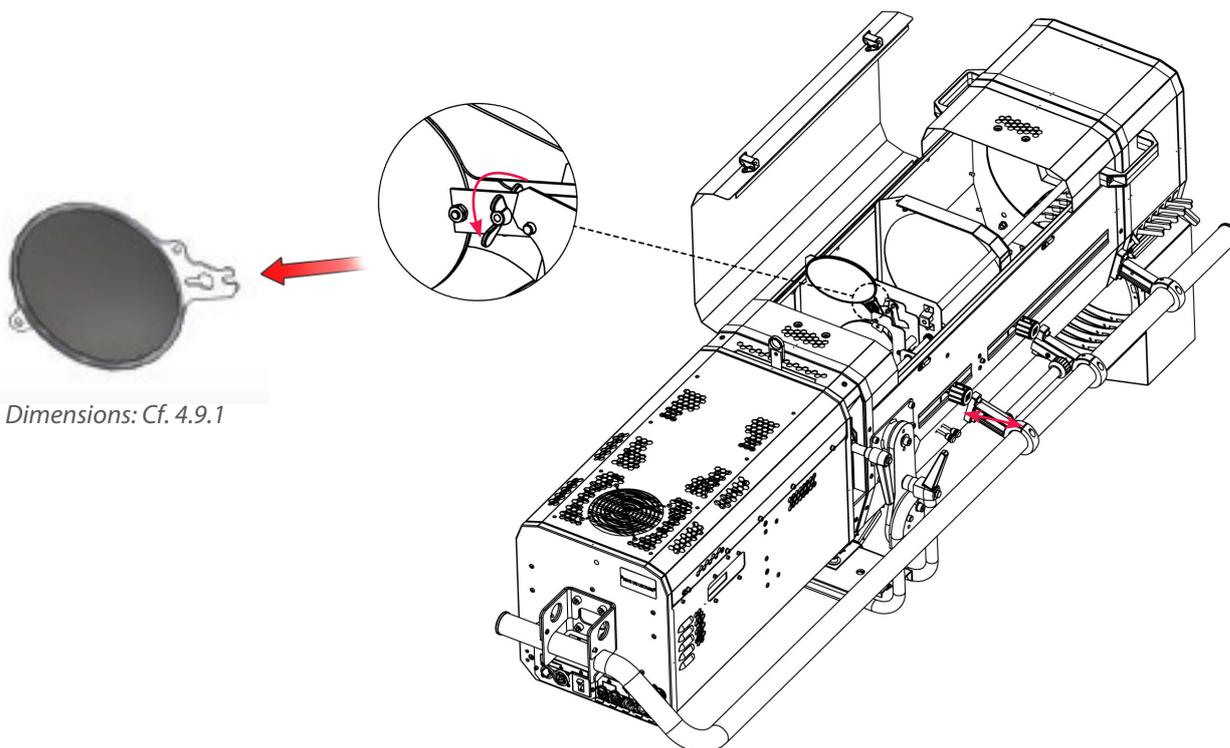

Dimensions: Cf. 4.9.1

### 3.4.6 Internal glass holder 120 x 120 mm (option)

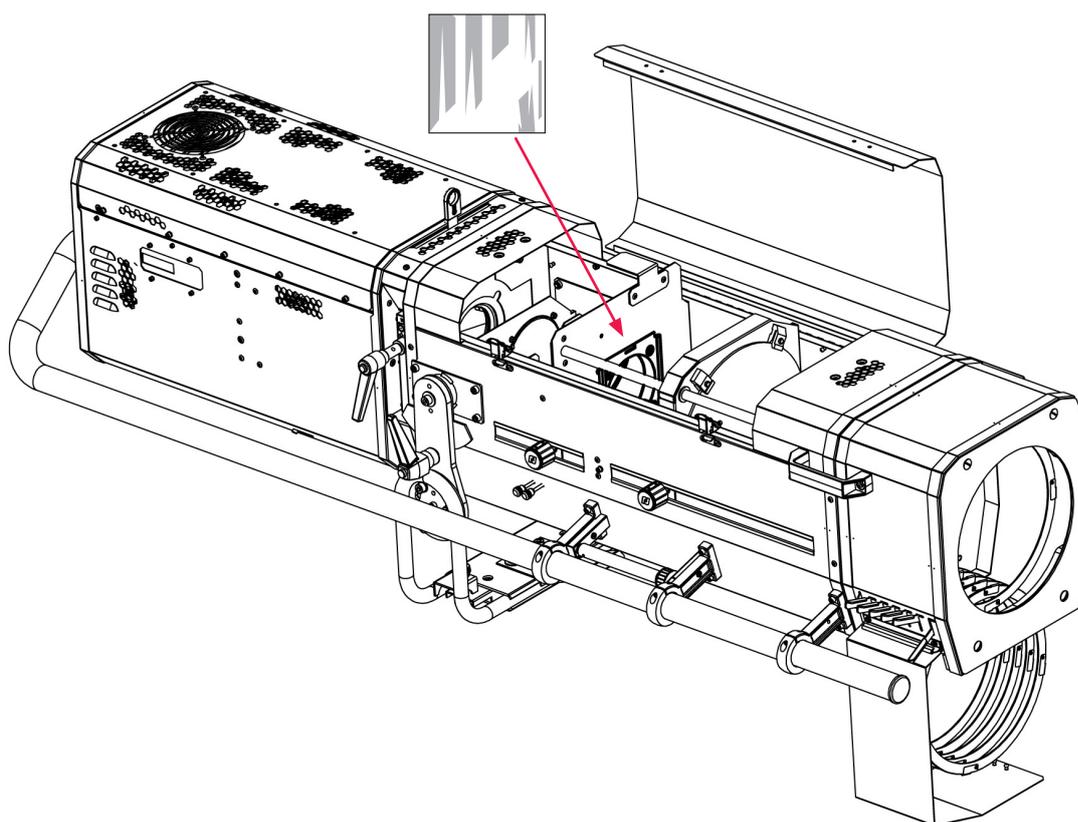


### 3.4.7 Stands (option)

- GT4000 Series : Please refer to the relevant stand technical files for further details.

Stand set-up, refer to Cf. 3.1.7.


### 3.4.8 Telrad followspot sight (option)

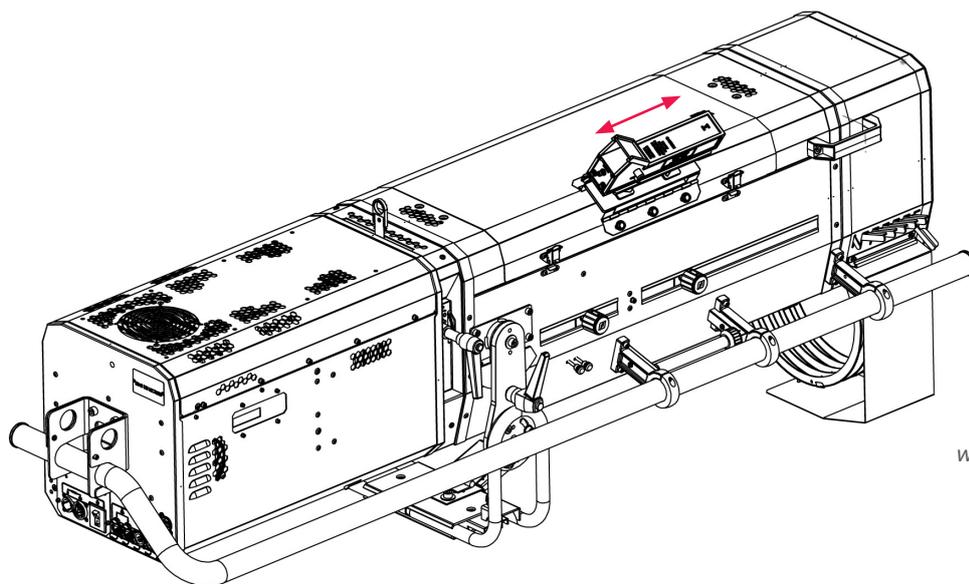


Followspot sight  
guide available @  
[www.robertjuliati.com/followspots/  
Accessories](http://www.robertjuliati.com/followspots/Accessories)

**Caution:** - Do not install the followspot sight on the lamp house to avoid blocking the ventilation vents.  
- Secure the sight with a suitable safety cable.



### 3.4.9 RJ cable strap

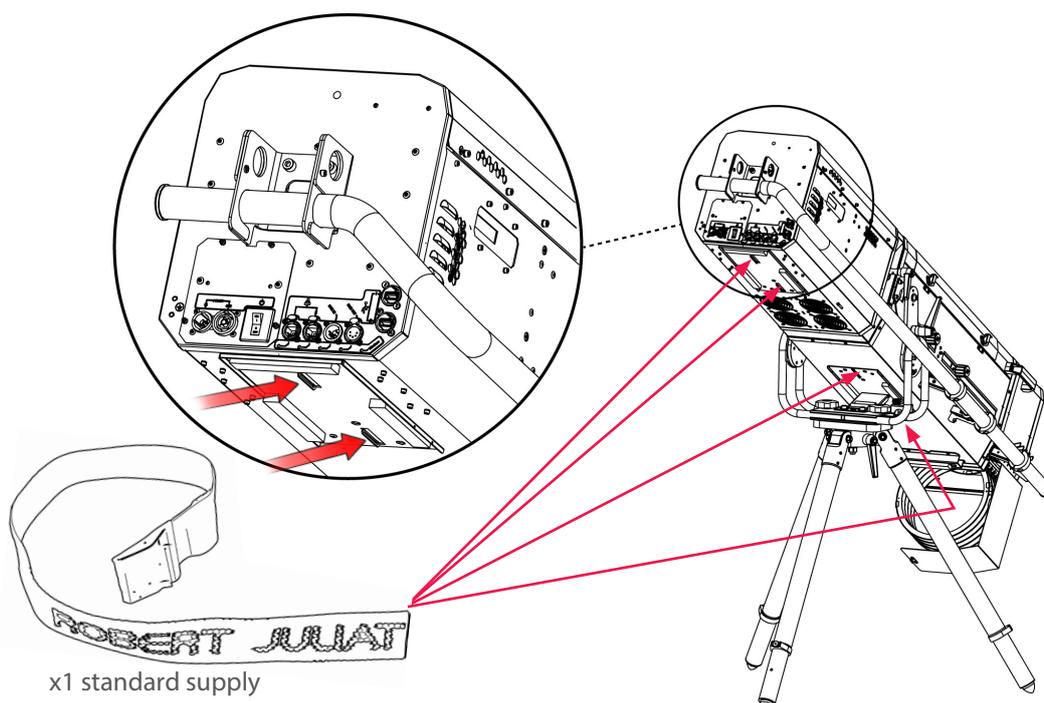

3.4.10 Flight-case (option)

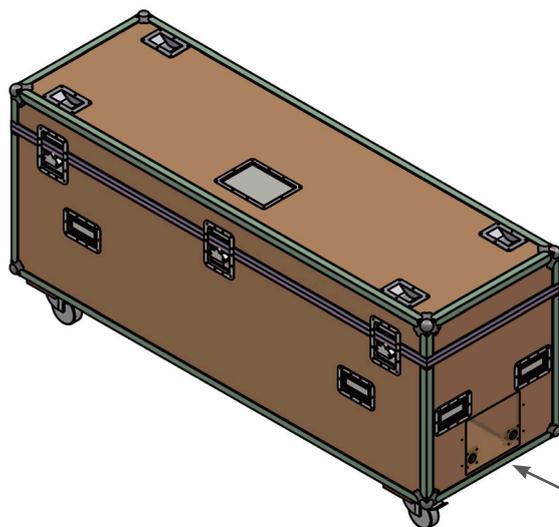

Inner side view

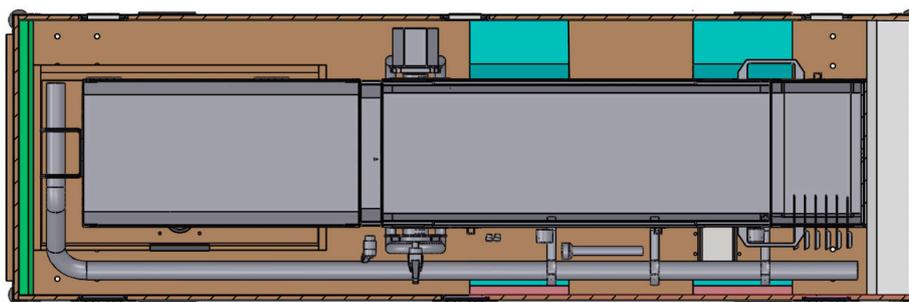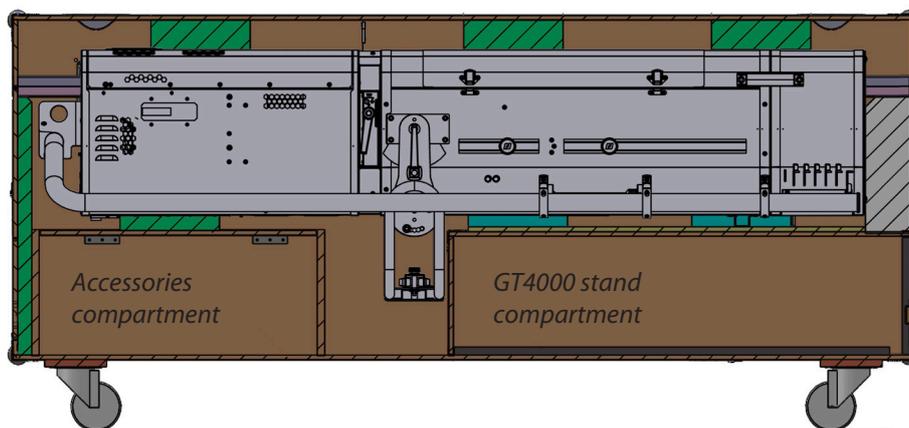

Inner overhead view

## 4.1 Light intensity

### 4.1.1 Range



### 4.1.2 Control

Remotely with DMX512-A protocol  
Art-Net / sACN

Locally via dimming control handle

Locally via Standalone mode

→ selection in  
DATA MODE / PROTOCOL /  
STANDALONE

**HTP mode (Highest Takes Precedence):**  
Light output is the highest value of DMX512 command or local control


### 4.1.3 Parameters

#### 4.1.3.1 Dimming resolution - DMX only

Resolution	DMX mode
8 bits – 255 steps	1 - 3 - 5
16 bits – 65 535 steps	2 - 4 - 6

#### 4.1.3.2 Dimming curve


→ selection in *SETUP / DIMMER / CURVE* menu: *LINEAR* or *SQUARE*

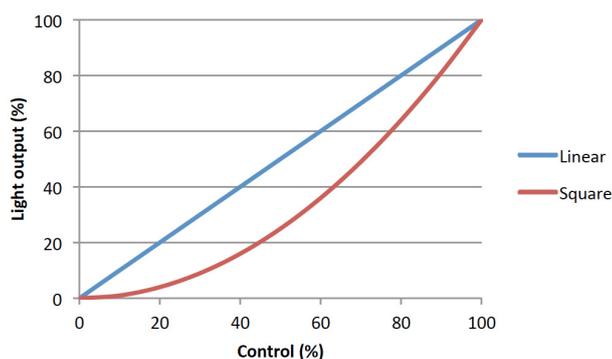

### 4.1.3.3 Master control


→ DMX Mode 5 / 6

In order to supervise the operator from the console, master control DMX channel can be used. This channel limits the maximum value of the dimmer shutter. By using this function, it is possible to obtain synchronised fades with several spots or to give intensity limits (minimum and maximum) to the operator. Master is only active when DMX is detected.

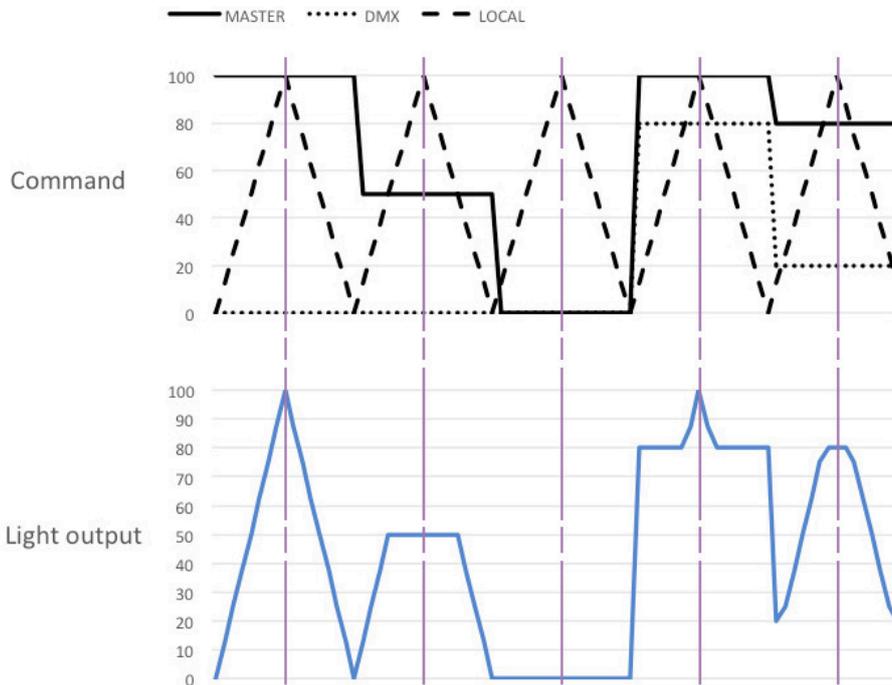

### 4.1.3.4 Set maximum position

→ Selection in *SETUP / DIMMER / MAX* menu

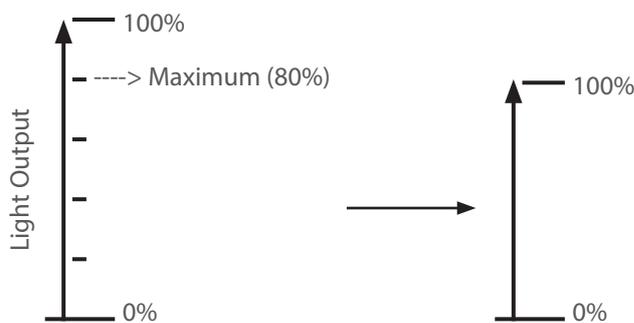


### 4.1.3.5 Dimming mode

→ Selection in *SETUP / DIMMER / DIMMING MODE* menu


Mode	Result
Without PWM	Flicker-Free, perfect for filming
PWM 20 KHz	Good dimming quality (Default Value)
PWM 3,2 KHz	Very good dimming

## 4.2 Strobe

### 4.2.1 Range

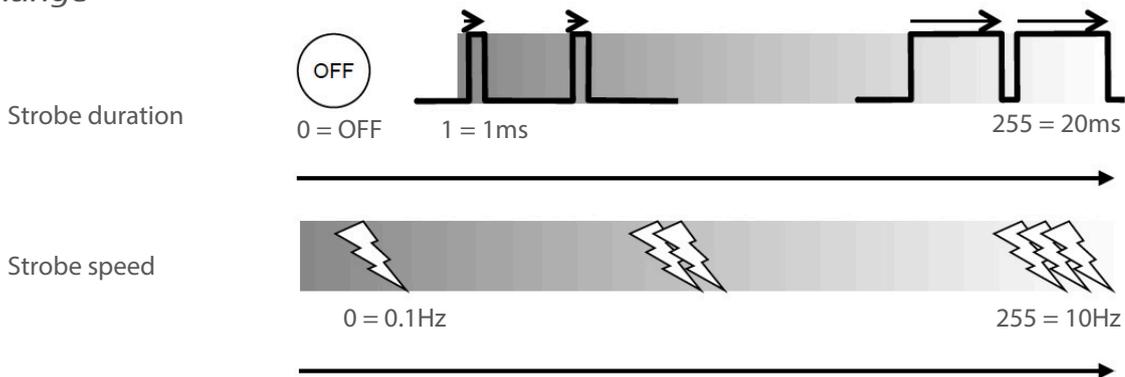


### 4.2.2 Control

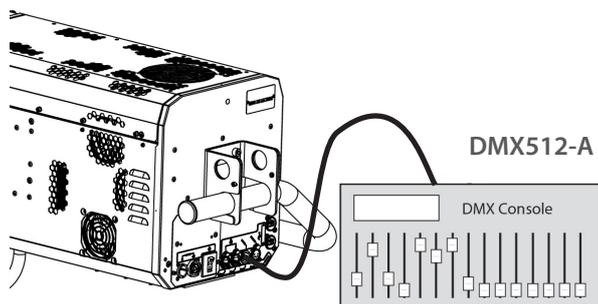


Remotely with  
DMX512-A / Art-Net / sACN protocols  
Mode 3 - 4 - 5 - 6

## 4.3 Response time


### 4.3.1 Range

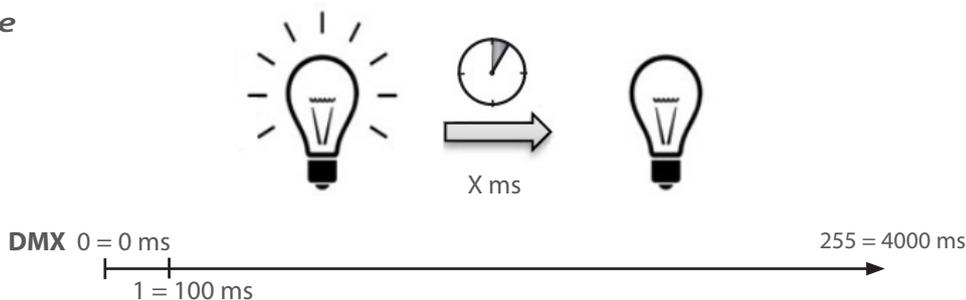

### 4.3.2 Control

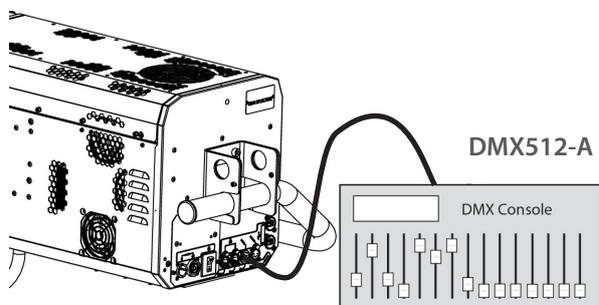

Remotely, with  
DMX512-A / Art-Net / sACN protocols  
Mode 3 - 4 - 5 - 6

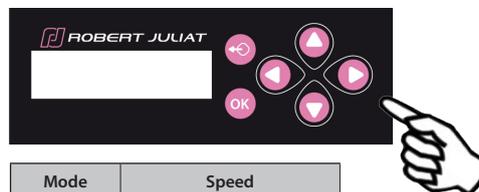


Mode	Speed
NONE	OFF
SLOW	700 ms
MEDIUM	470 ms
FAST	350 ms
CUSTOM	0 - 4000 ms

Locally, only when no DMX detected or  
DMX 512-A/Art-Net/sACN protocols  
Mode 1 + 2  
→ selection in  
SETUP / DIMMER / RESPONSE TIME


### 4.4 Beam size adjustment

#### 4.4.1 Range

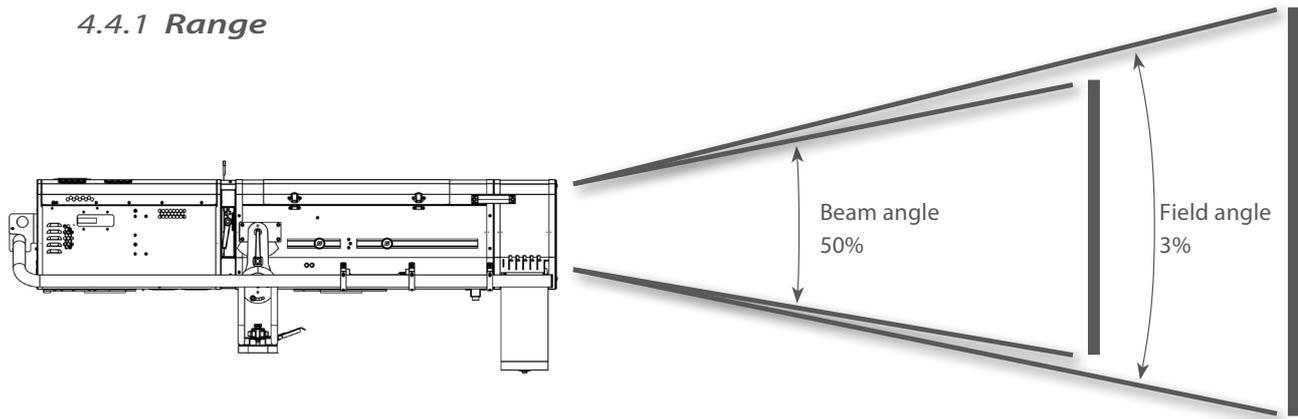

Model	Angles	Minimum angle	Maximum angle
ARTHUR 1014	Beam angle	5.4°	13.2°
	Field angle	5.8°	13.6°



#### 4.4.2 Control

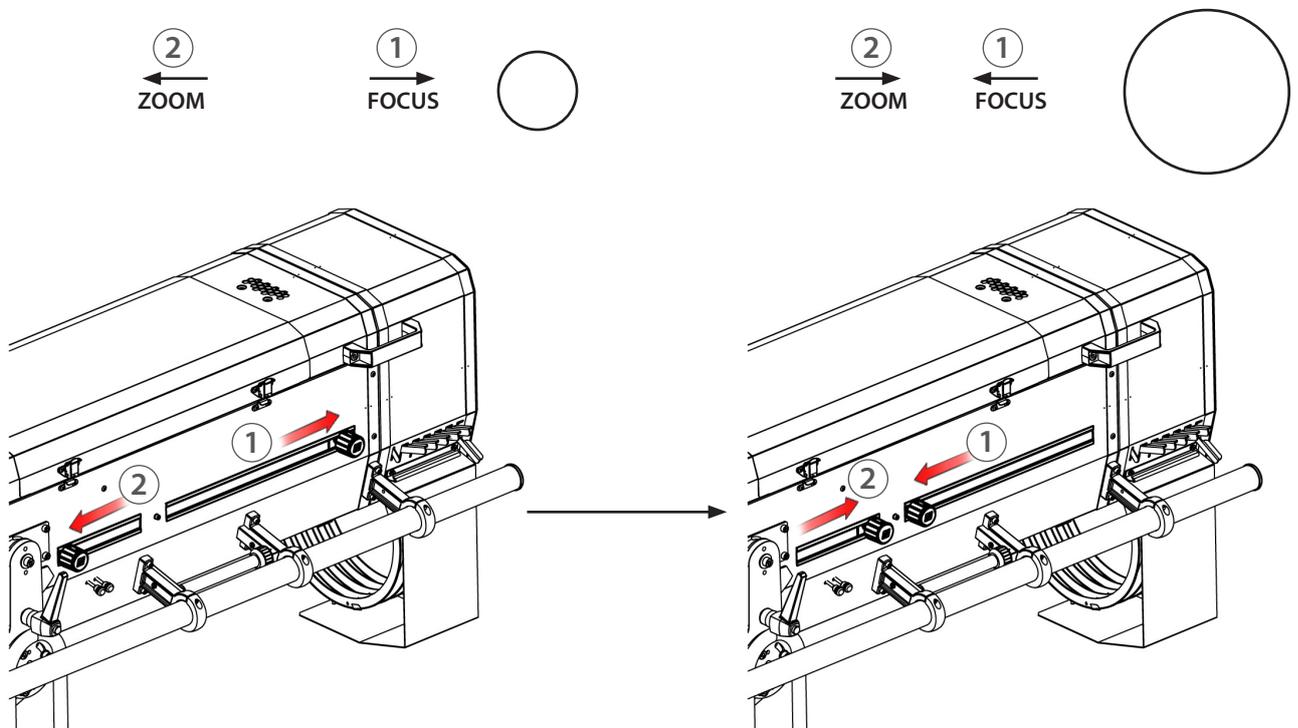


## 4.5 Pan / Tilt



### 4.5.1 Range

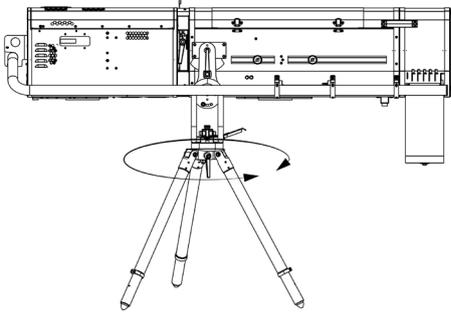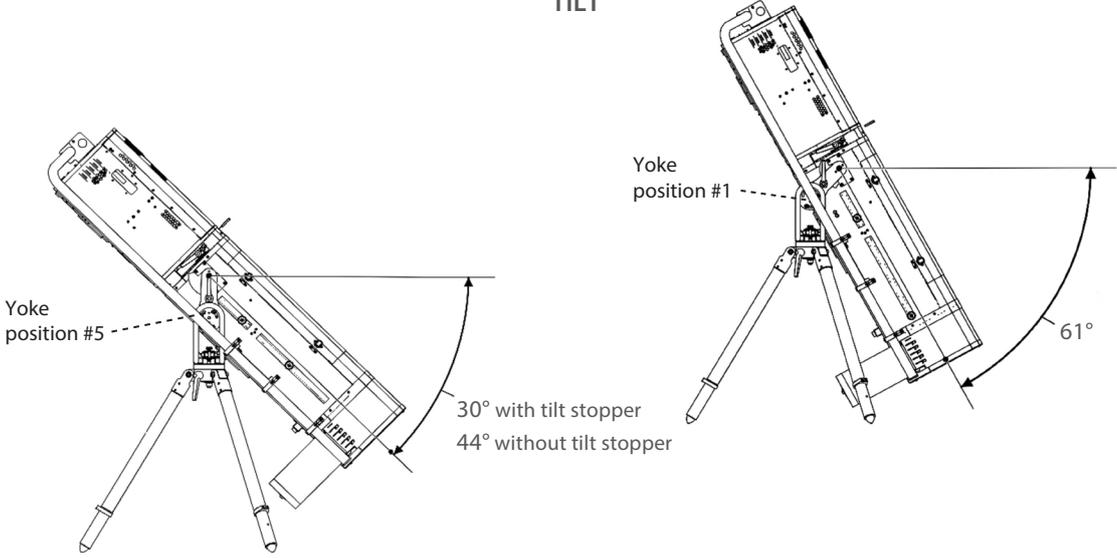Function	Range
<p data-bbox="571 320 624 342">PAN</p> 	<p data-bbox="1137 495 1254 517">0 → 360°</p>
<p data-bbox="868 710 920 732">TILT</p> 	


### 4.5.2 Control

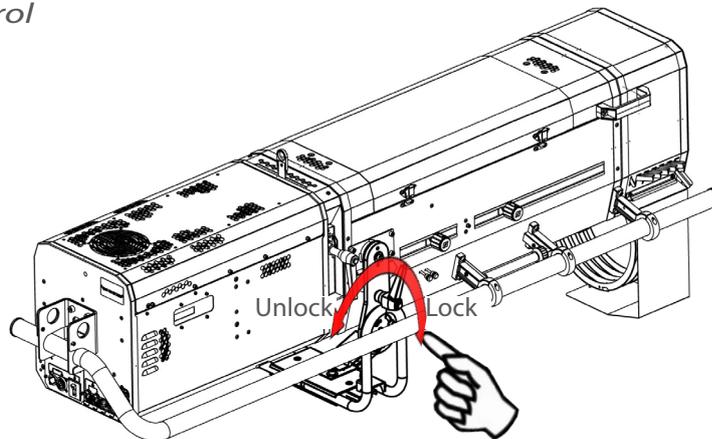


4.6 Iris

4.6.1 Range

- Irising

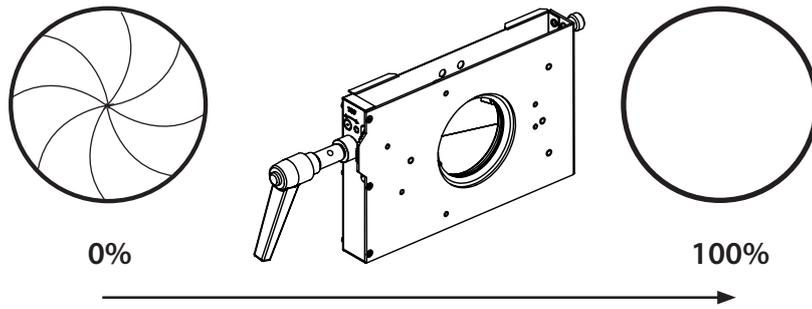


4.6.2 Control

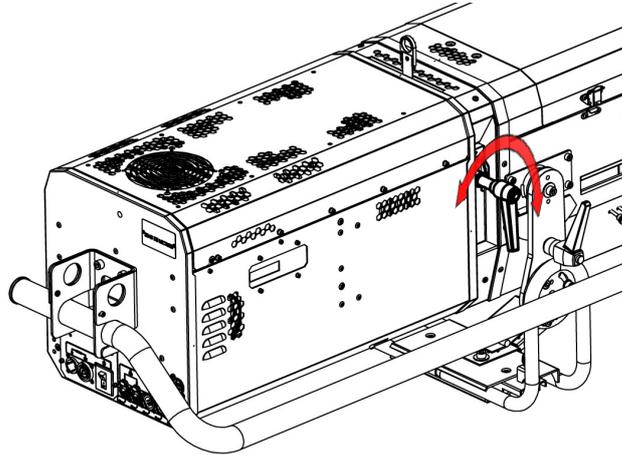


4.7 Gobo


4.7.1 Range

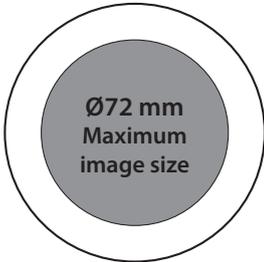Type	Standard gobo - A size	
Dimensions	<p>Ø100 mm</p>  <p>Ø72 mm Maximum image size</p> <ul style="list-style-type: none"> <li>• Metal</li> <li>• Glass</li> </ul>	
Installation	Cf. section: 3.4.4	




4.7.2 Control

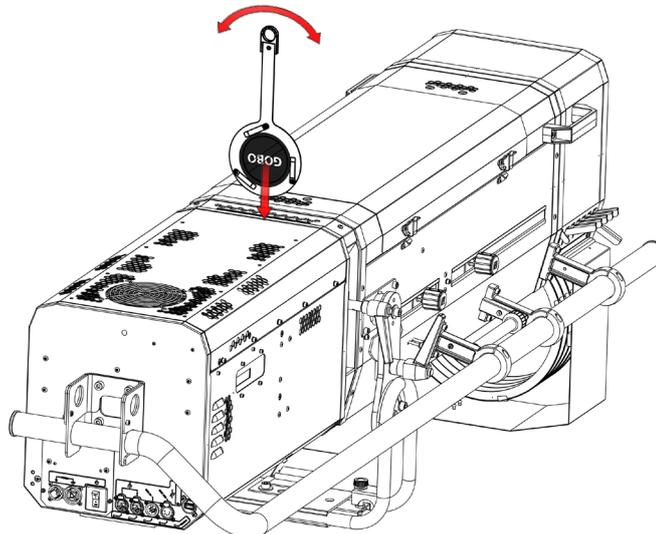


4.8.1 Range

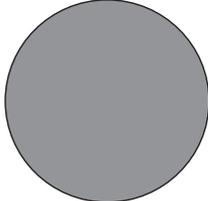Type	Coloured gel filter
Dimension	<p>Ø270 mm</p> 
Installation	<p>Cf. section: 3.4.2 &amp; section 3.4.3 Place dark colours towards the front end.</p>


4.8.2 Control

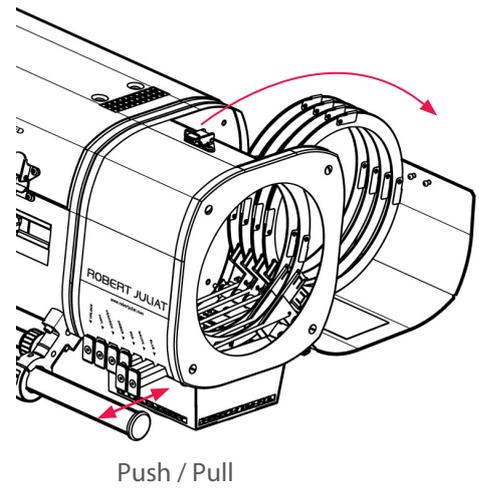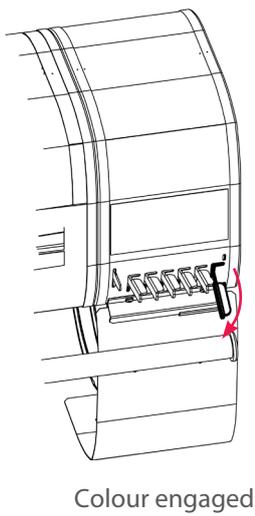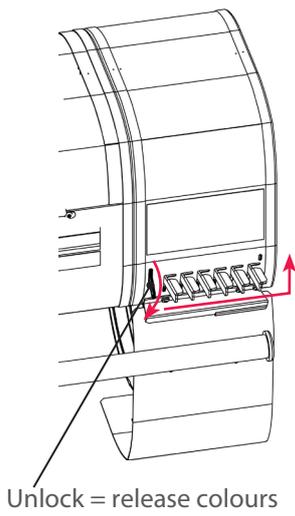

4.9.1 Range

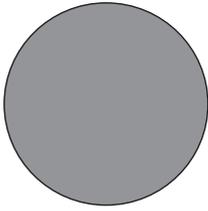Type	Frost or Correction filter
Dimension	<p>Ø120 mm</p> 
Installation	Cf. section: 3.4.6


4.9.2 Control

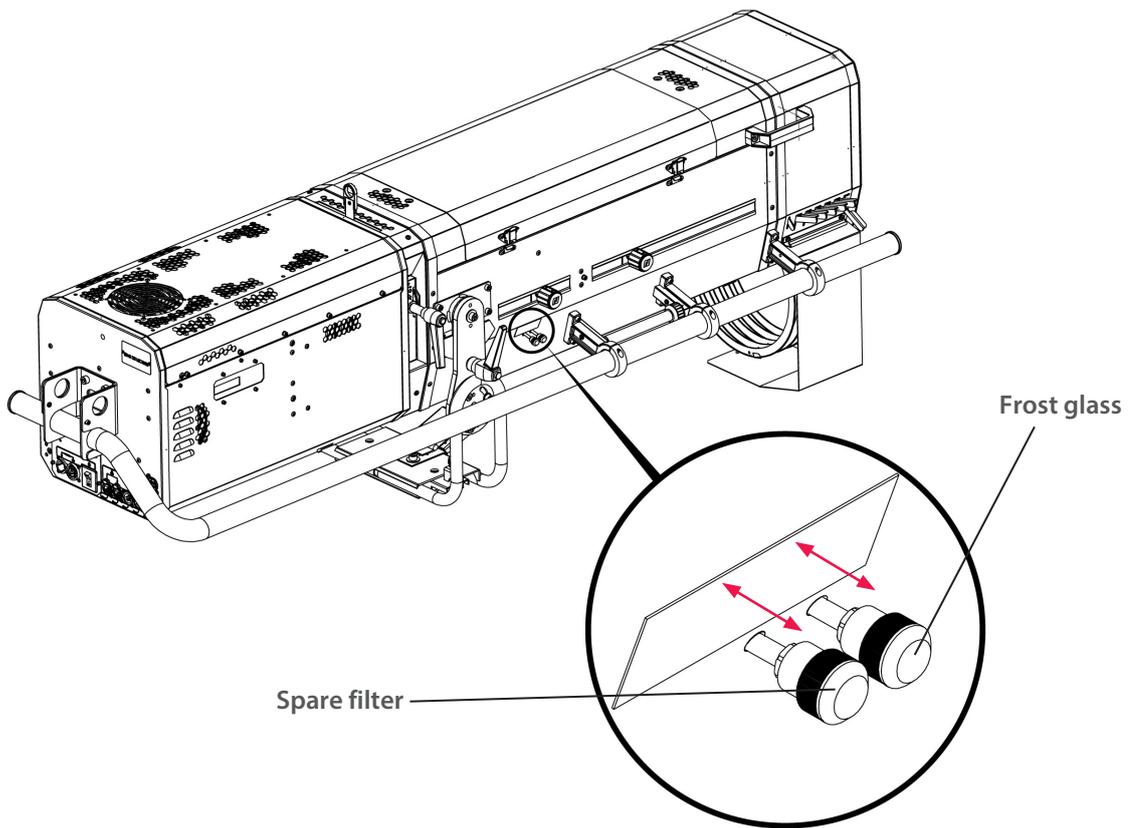

# 5 Controls and parameters

## 5.1 Local display and controls

### 5.1.1 Display

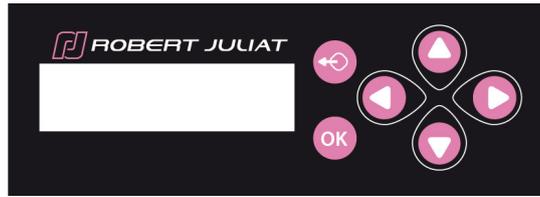


Function	
	Exit the current menu option and/or go back
	Enter the current menu option and/or valid
	Scroll through menus and/or Increase data value
	Scroll through menus and/or Decrease data value
	Scroll through menus and/or Increase data value
	Scroll through menus and/or Decrease data value

### 5.1.2 Home screen

Display	Mode	Description
	Home	Main display (home screen)
	 x1 push	Diagnostics
	 x1 push	Network information
	 x2 push	DMX information

5.1.3 Menu

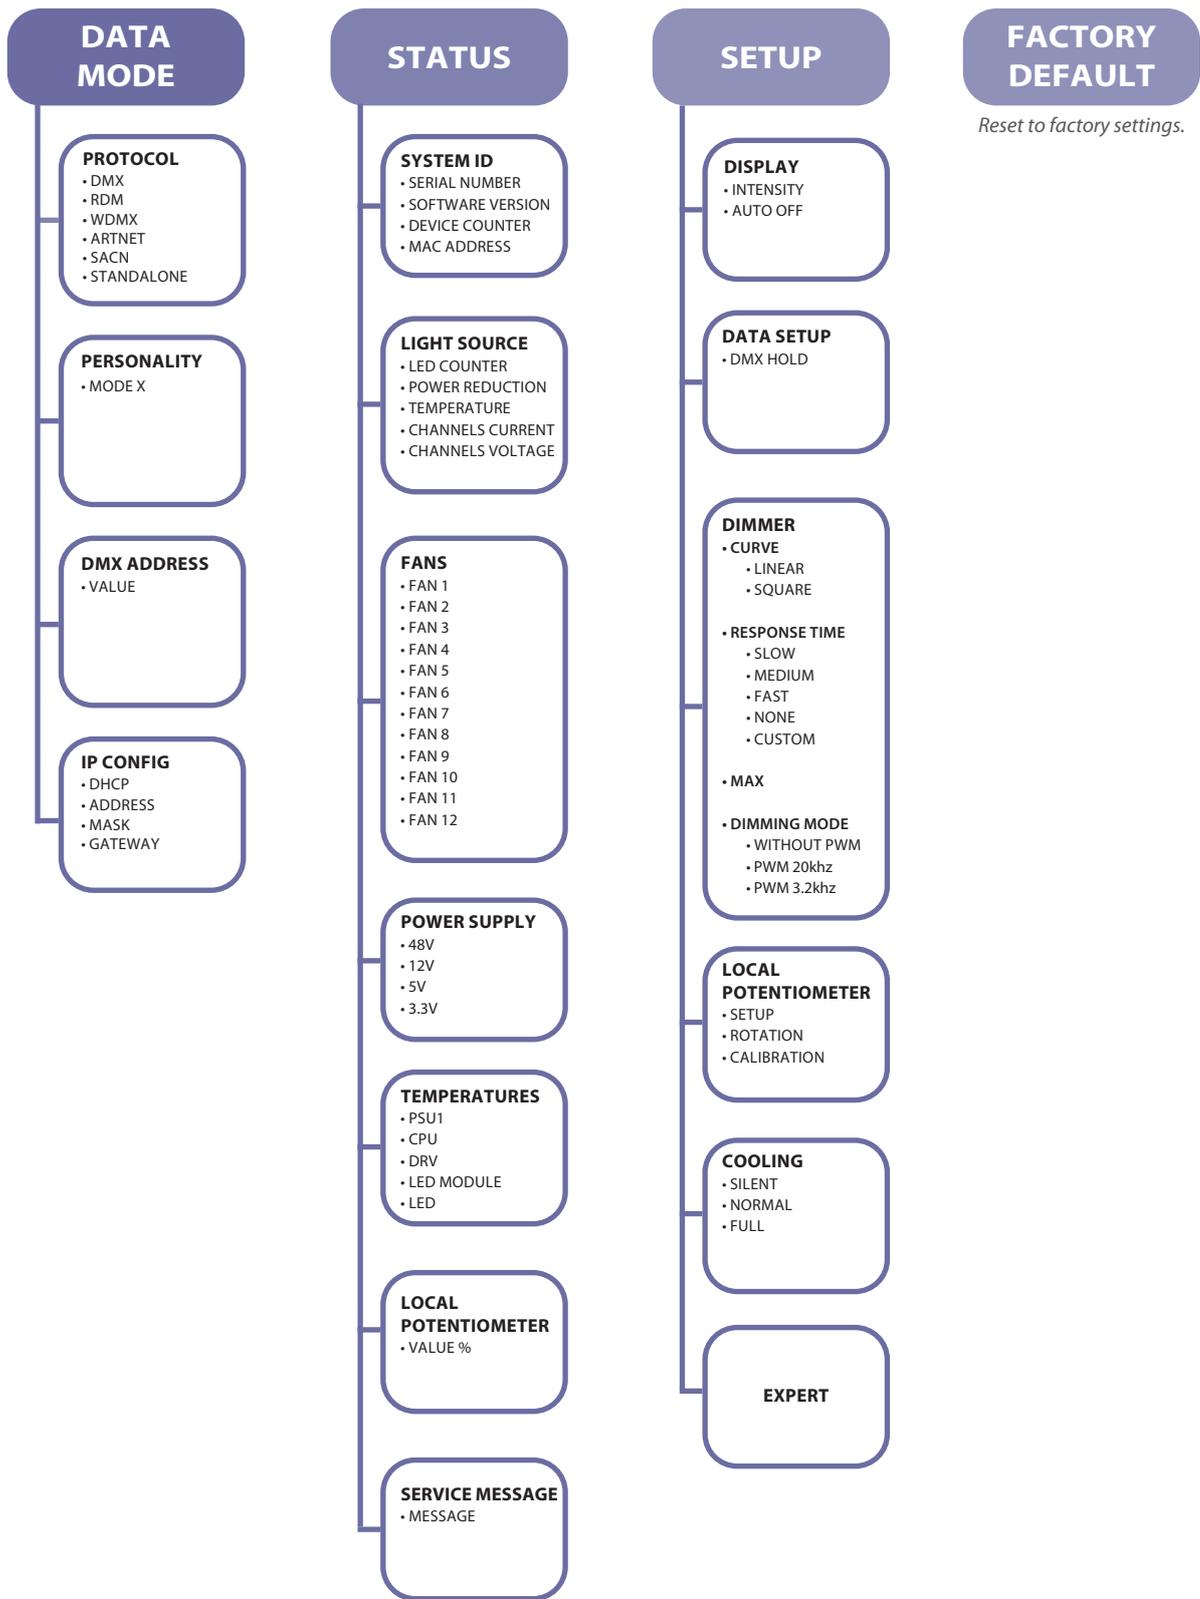

5.1.4.1 Intensity

➔ Selection in *SETUP / DISPLAY / INTENSITY* menu

Display	Mode	Description
	Intensity	Adjust the intensity of the screen To change value, press buttons :   press OK to validate

5.1.4.2 Auto-OFF

➔ Selection in *SETUP / DISPLAY / AUTO OFF* menu

Display	Mode	Description
	Always ON	Main display, always ON press OK to validate
	Timer without warning	Main display OFF after 20 seconds press OK to validate
	Timer with warning	Main display OFF after 20 seconds, ON if warning information occurs press OK to validate



## 5.2.4 DMX chart:

DMX address	Mode 1: Dimmer8B	Mode 2: Dimmer16B	Mode 3: Profile8B	Mode 4: Profile16b	Mode 5: Followspot8b	Mode 6: Followspot16b
1	Dimmer	Dimmer	Dimmer	Dimmer	Dimmer	Dimmer
2		Dimmer fine	Strobe duration	Dimmer fine	Master	Dimmer fine
3			Strobe speed	Strobe duration	Strobe duration	Master
4			Response time	Strobe speed	Strobe speed	Master fine
5			Control mode	Response time	Response time	Strobe duration
6				Control mode	Control mode	Strobe speed
7						Response time
8						Control mode

## 5.2.5 DMX ranges:

### 5.2.5.1 Strobe duration

Range min	Range max	Function
0	0	Strobe OFF
1	255	Strobe ON - 1 ms → 20 ms

### 5.2.5.2 Strobe speed

Range min	Range max	Function
0	255	Frequency: 0,1 Hz → 10 Hz

### 5.2.5.3 Response time

Range min	Range max	Function
0	0	OFF
1	255	Dimmer timing: 0,1 s → 4 s

### 5.2.5.4 Control mode

Range min	Range max	Function
0	0	
1	10	RDM disabled
11	20	RDM enabled
21	100	Not used
101	110	Cooling mode: Silent
111	120	Cooling mode: Normal
121	130	Cooling mode: Full power
131	255	Not used

Function activated after 5 seconds - need to go back to zero to activate second function.

### 5.3 RDM remote control

#### 5.3.1 Protocol: ANSI E1.20 – 2010 / ANSI E1.37 - 1

For more information about RDM protocol: <http://www.rdmprotocol.org/>

PID	Function	Comments	MSB	LSB	UID description	Get	Set
<b>Network Management</b>							
00 01	DISCOVERY_UNIQUE_BRANCH						
00 02	DISCOVERY_MUTE						X
00 03	DISCOVERY_UNMUTE						X
00 15	COMMUNICATION_STATUS					X	X
	Status Collection						
00 20	QUEUED_MESSAGE					X	
	RDM Information						
00 50	SUPPORTED_PARAMETERS					X	
00 51	PARAMETER_DESCRIPTION					X	
	Product Information						
00 60	DEVICE_INFO					X	
		Protocol Version	01	00	(ESTA RDM SOFTWARE VERSION)		
		Device Model_ID	10	14	(RJ MODEL REFERENCE)		
		Product Category	01	01	PRODUCT_CATEGORY_FIXTURE_FIXED		
		Software Version_ID					
		DMX512 Footprint					
		DMX Personality 1 To X					
		Start Address					
		Sub Device					
		Sensor Count					
00 70	PRODUCT_DETAIL_ID_LIST		00	04	PRODUCT_DETAIL_LED	X	
00 80	DEVICE_MODEL_DESCRIPTION				ARTHUR	X	
00 81	MANUFACTURER_LABEL				Robert Juliat	X	
00 82	DEVICE_LABEL				800W LED FOLLOWSPOT	X	X
00 90	FACTORY_DEFAULTS					X	X
00 C0	SOFTWARE_VERSION_LABEL					X	
00 C2	BOOT_SOFTWARE_VERSION_LABEL					X	
<b>DMX512 Setup</b>							
00 E0	DMX512_PERSONALITY					X	X
00 E1	DMX512_PERSONALITY_DESCRIPTION					X	
00 F0	DMX512_STARTING_ADDRESS					X	X
01 20	SLOT_INFO					X	
01 21	SLOT_DESCRIPTION					X	
01 22	DEFAULT_SLOT_VALUE					X	
<b>Sensors</b>							
02 00	SENSOR_DEFINITION					X	
02 01	SENSOR_VALUE					X	
<b>Dimmer Settings</b>							
03 43	CURVE	E1.37-1				X	X
03 44	CURVE_DESCRIPTION	E1.37-1				X	
04 00	DEVICE_HOURS	Set = Factory Locked				X	
04 01	LAMP_HOURS	Set = Factory Locked				X	X
<b>Control</b>							
10 00	IDENTIFY_DEVICE					X	X
10 40	IDENTIFY_MODE	E1.37-1			0x00 "Quiet Identify"- 0xFF "Loud Identify" - 0x10 "Timeout"	X	X

## 5.4 Art-Net remote control



### 5.4.1 Protocol: Artistic Licence Art-Net v3.


For more information about Art-Net protocol: <http://art-net.org.uk/>

### 5.4.2 Configuration:




(\*) **Caution:**

Activate Art-Net in protocol mode beforehand.

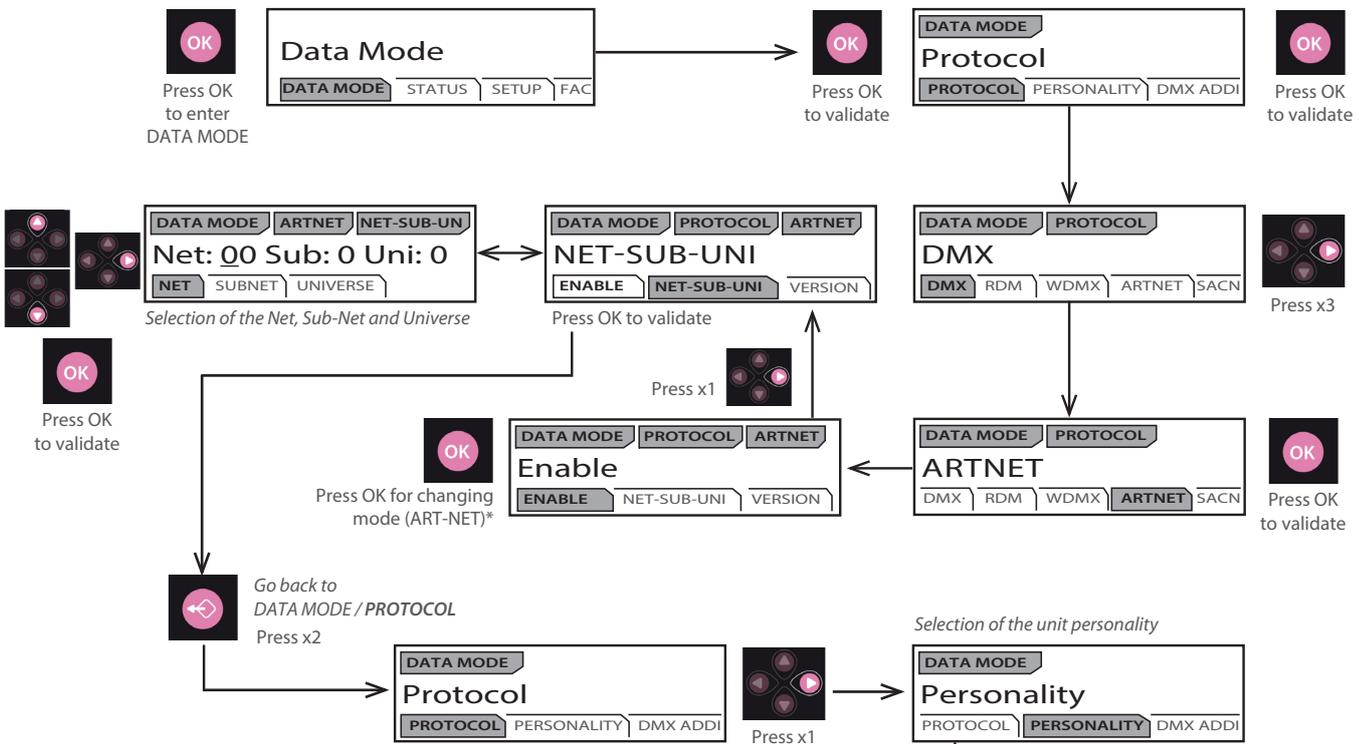

**NOTA:** To go back to another active mode, select: DMX or sACN and press OK to validate.

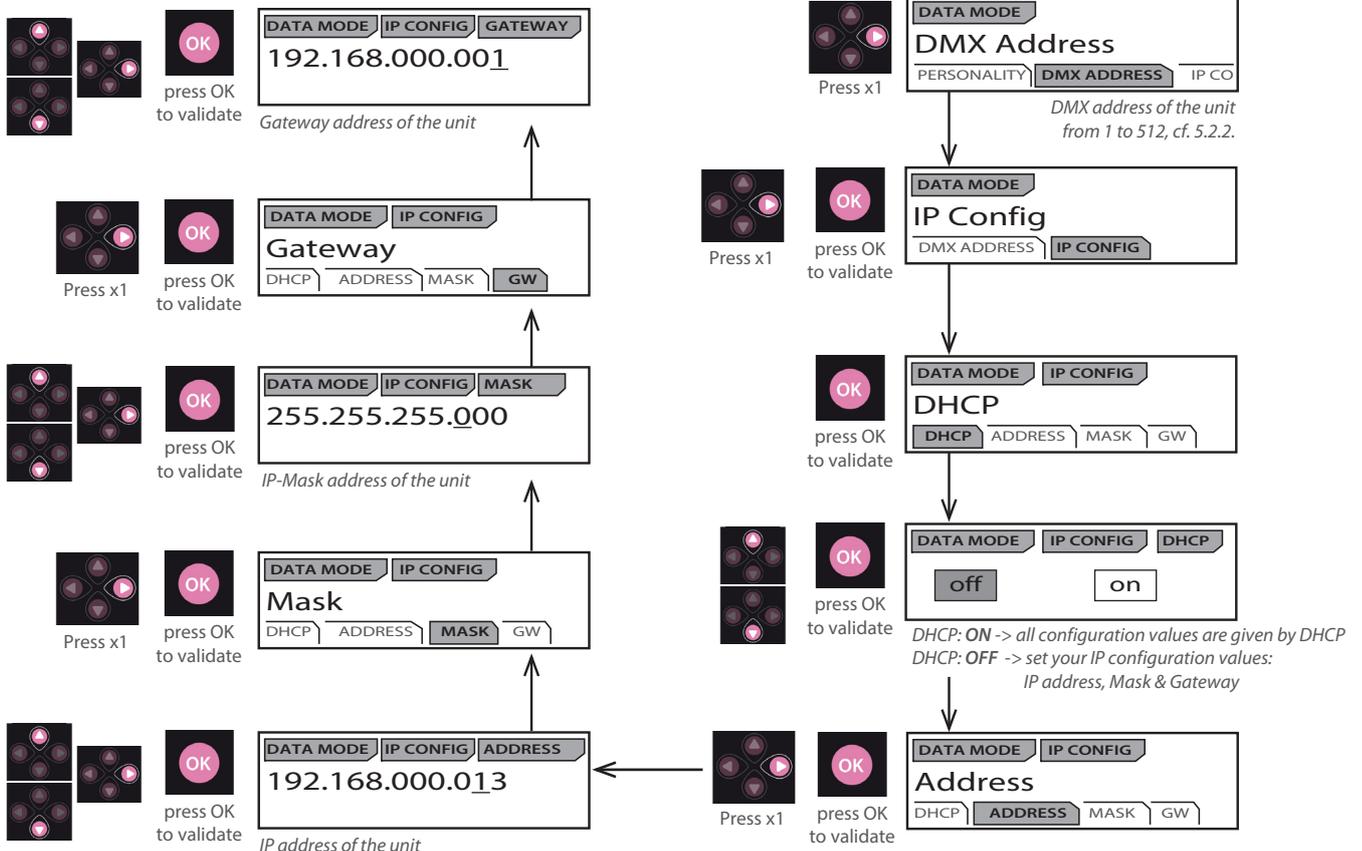


## 5.5 sACN remote control

### 5.5.1 Protocol: ANSI E1.31 – 2009 sACN (Streaming-ACN)


#### 5.5.2 Configuration:



(\*) **Caution:**  
Activate sACN in protocol mode beforehand.

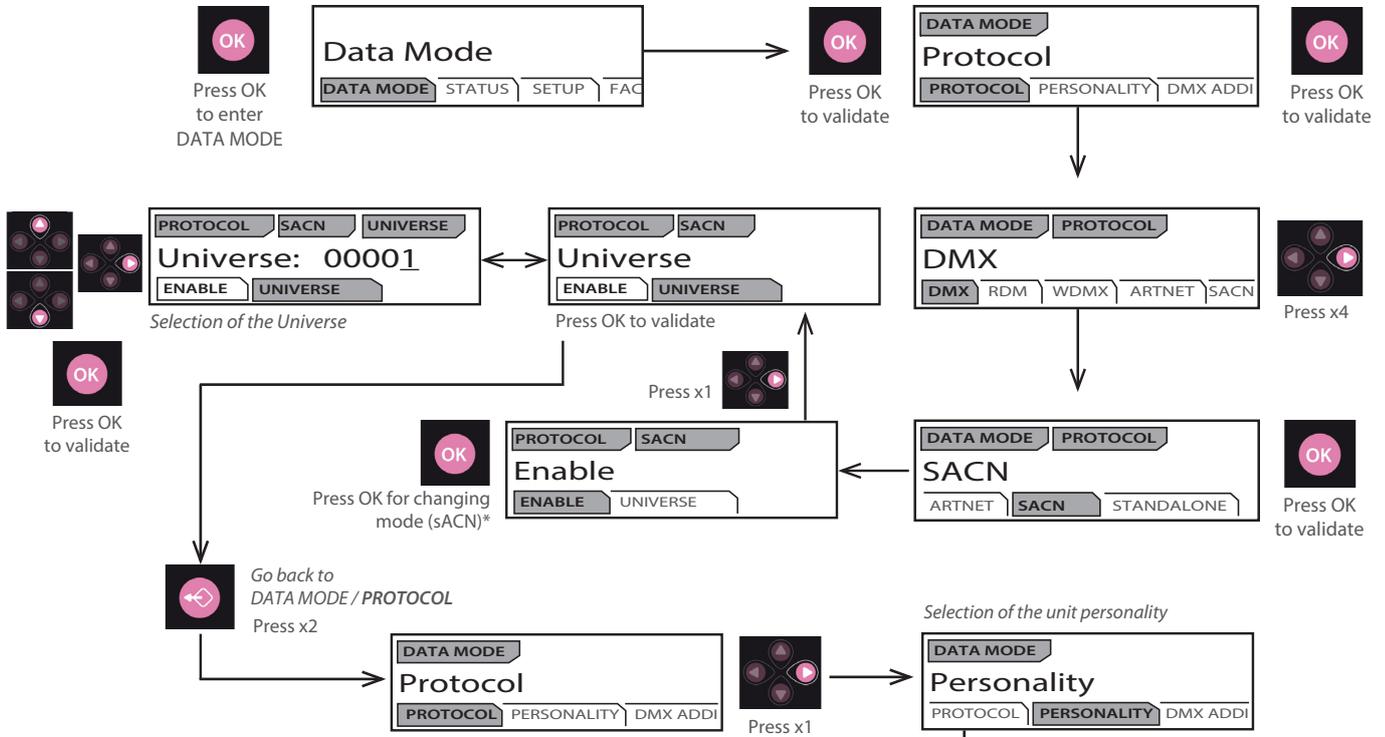

**NOTA:** To go back to another active mode, select: DMX or Art-Net and press OK to validate.

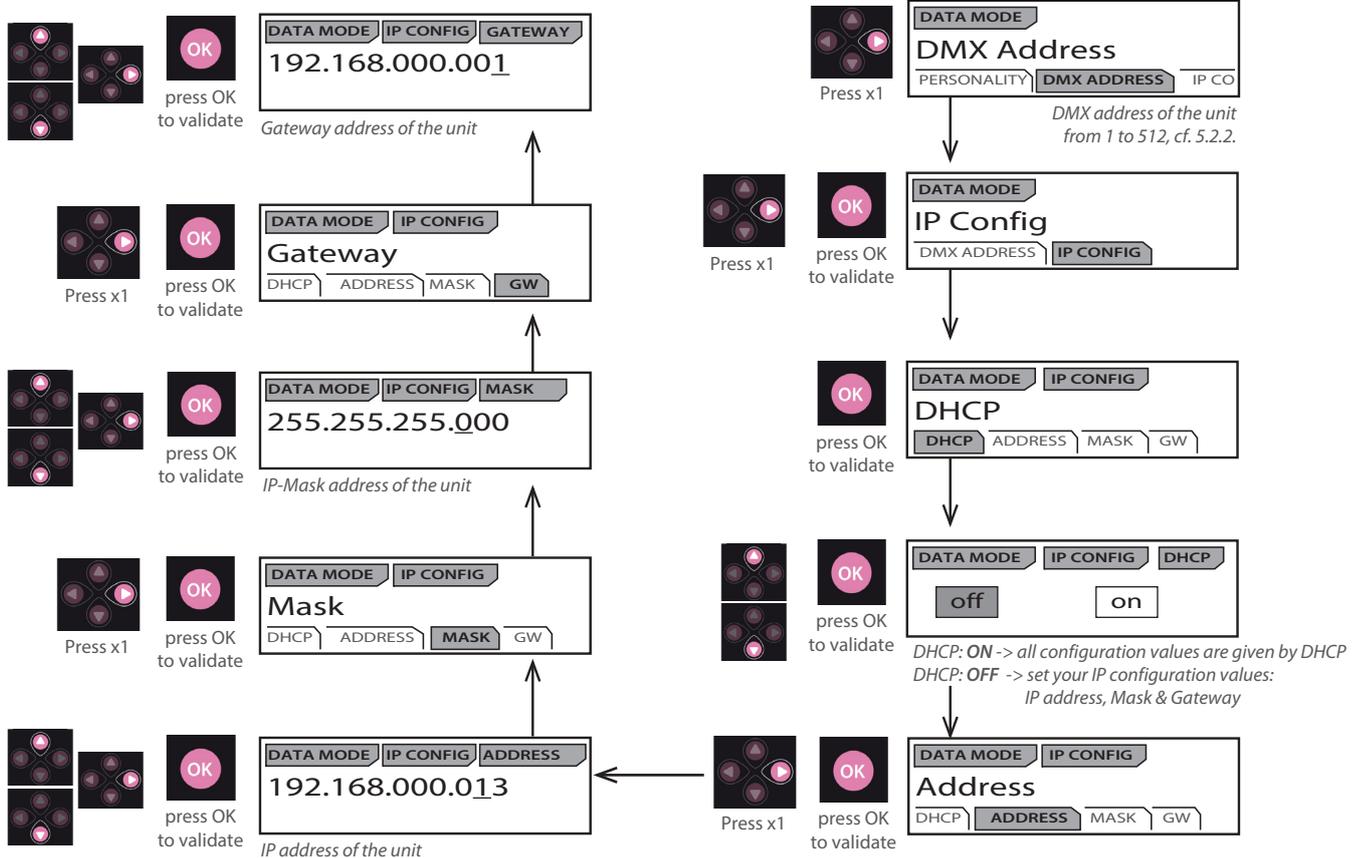


## 5.6 Fan cooling modes

### 5.6.1 Range

Modes	Silent	Normal	Full
 <b>Cooling</b> Ambient temperature: 30°C	 < 35 dB(A)	 < 37 dB(A)	 < 39 dB(A)
 <b>Brightness</b>	90%	98%	100%

### 5.6.2 Control

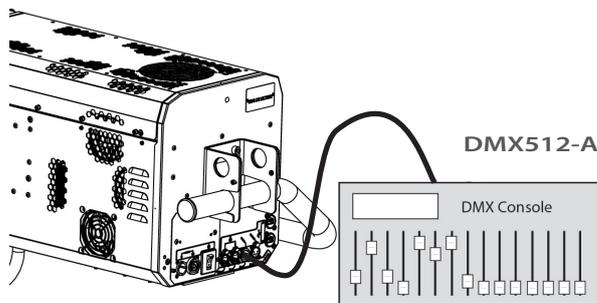







Remotely by DMX512-A  
 Mode 3 - 4 - 5 - 6



Locally → selection in  
 SETUP / COOLING

### 5.7 Local potentiometer

→ selection in *SETUP / LOCAL POTENTIOMETER*

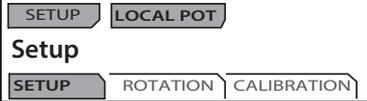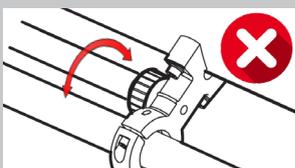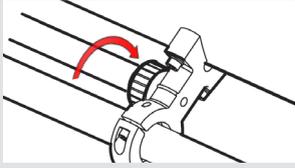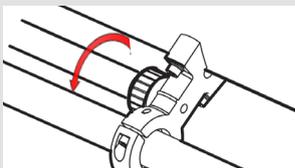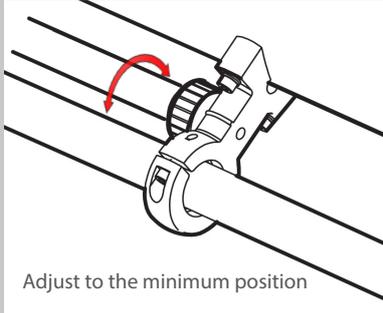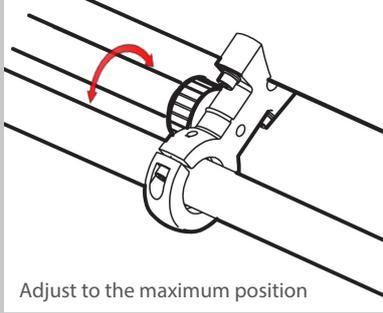Function	Parameters	Description
<p><b>Setup</b></p>  <p><b>Setup</b></p> 	 <p><b>Disable</b>   <b>Enable</b></p>	<p>Disable</p>  <p>OK Press OK to validate</p>  <p>Enable</p>  
<p><b>Rotation</b></p>  <p><b>Rotation</b></p> 	 <p><b>Normal(CW)</b>   <b>Invert (CCW)</b></p>	<p>Normal (CW): Clockwise</p>  <p>OK Press OK to validate</p>  <p>Invert (CCW): Anticlockwise</p> 
<p><b>Calibration</b></p>  <p><b>Calibration</b></p> 	 <p><b>Min</b>   <b>Max</b></p>	 <p>OK Press OK to validate</p> <p>Adjust to the minimum position</p>   <p><b>Min</b>   <b>Max</b></p>  <p>OK Press OK to validate</p> <p>Adjust to the maximum position</p>

## 6 Service

### 6.1 Preventive maintenance

#### 6.1.1 Frequency

General maintenance should be performed at least once a year or more frequently if the equipment is operated in adverse conditions (smoke, heat, humidity, touring, etc.).

#### 6.1.2 General cleaning

Remove dust from the unit.

Front glasses can be cleaned with solutions containing alcohol.

#### 6.1.3 General visual check

- No trace of heat.
- No loose contacts.
- No missing parts.
- Tighten mechanical assemblies (screws, bolts and nuts, etc.).

#### 6.1.4 LED source


- Do not touch the surface of the LED source (no contact with your hands or any tools).
- Do not put compressed air directly on the source.
- Contact a certified RJ distributor in case of residuals or other objects located on the surface of the LED source.



#### 6.1.5 Optics

Only use solutions containing alcohol to clean optical parts (lenses).

- To clean the optical parts, use a soft cloth in combination with distilled water or isopropyl alcohol recommended for coated optics. Do not use any cleaning product that contains solvents or abrasives, as these can cause surface damage.
- Dry with a soft lint-free cloth.

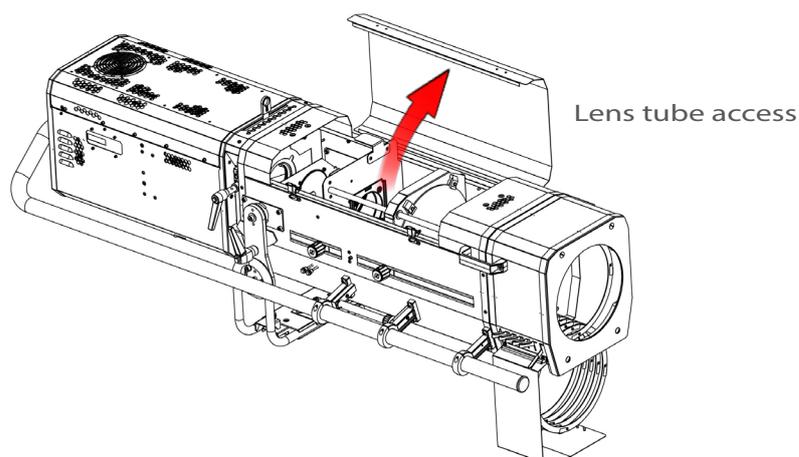


#### 6.1.6 LED house cleaning


Inner parts & lens holder access.

- To clean the optical parts, use a soft cloth in combination with distilled water or isopropyl alcohol recommended for coated optics. Do not use any cleaning product that contains solvents or abrasives, as these can cause surface damage.
- Dry with a soft lint-free cloth.


Removing the LED housing cover: 1 → 2

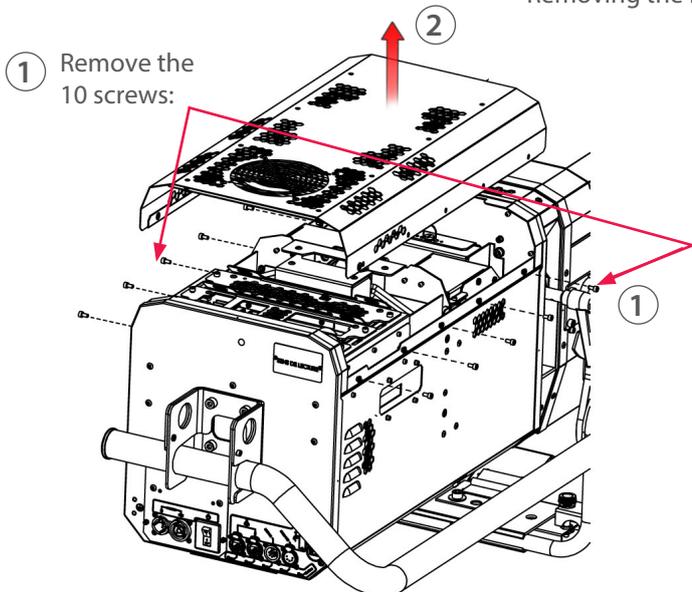

Removing the LED module: 1 → 2 → 3

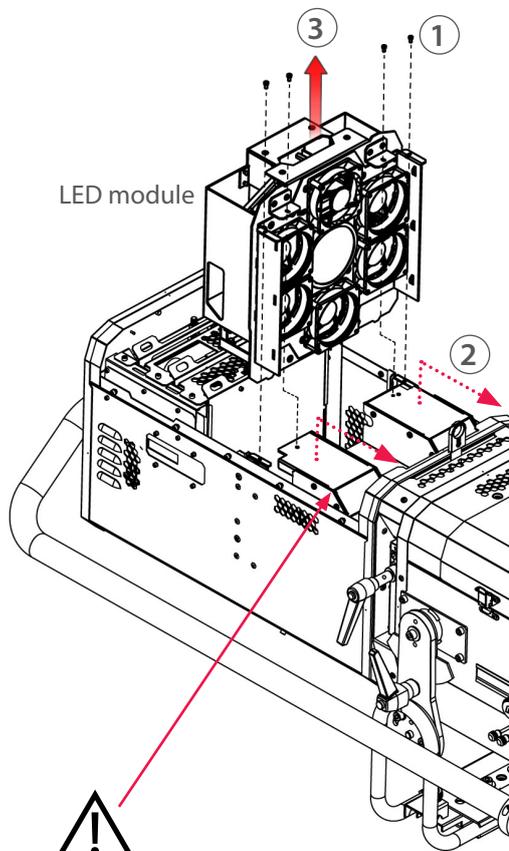

Aspheric lens holder

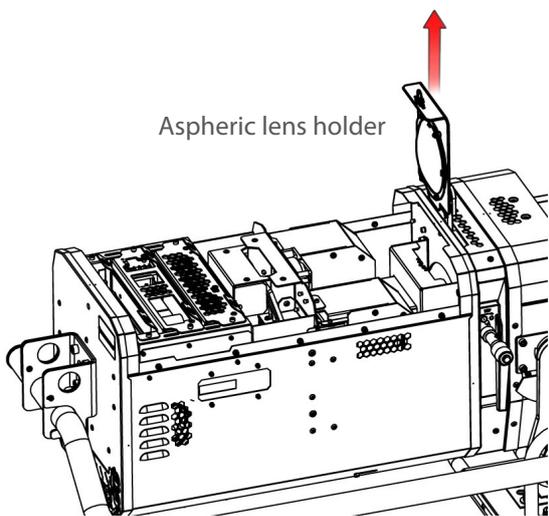

After removing the 4 screws (step #1), push forward the LED protection unit (step #2).

### 6.2 Analysis

In case of problem, contact RJ distributor with the following information:

- Model, version and serial number of the product.
- From the menu status:
  - Software version
  - LED board IDs
  - Device hours
- Description of the problem.



### 6.3 Electronic thermal management system

In case of overheating, light intensity will be reduced by the system.

"Power reduction X%" will be shown on the display with the reducing percentage.

## 6.4 Firmware update

1. Firmware available on [www.robertjuliat.com/followspots/Arthur](http://www.robertjuliat.com/followspots/Arthur)
2. Download and unzip the file
3. Switch on Arthur and config IP address (DATAMODE>IP-CONF):
  - a. DHCP = OFF
  - b. ADDRESS = AAA.BBB.CCC.XXX
  - c. MASK = 255.0.0.0
  - d. Exit to main menu to validate modifications

IP configuration available on *Home* screen view:





x1 push

Link status :	NOK	DHCP :	OFF
IP	192.168.000.013		
MASK	255.255.255.000		
GW	192.168.000.001		

4. Set the Network IP of the computer :
  - a. ADDRESS = AAA.BBB.CCC.YYY with  $YYY \neq XXX$   
*Do not use the same IP address as the Arthur followspot.*
  - b. MASK = 255.0.0.0
5. Connect Network from computer to Arthur, if you don't have an Auto MDI-X or a switch, use a cross link cable
6. Open a web browser (Internet Explorer, Firefox, Chrome...)
7. Enter the URL address of the Arthur: <http://AAA.BBB.CCC.XXX>

Screens in web browser:

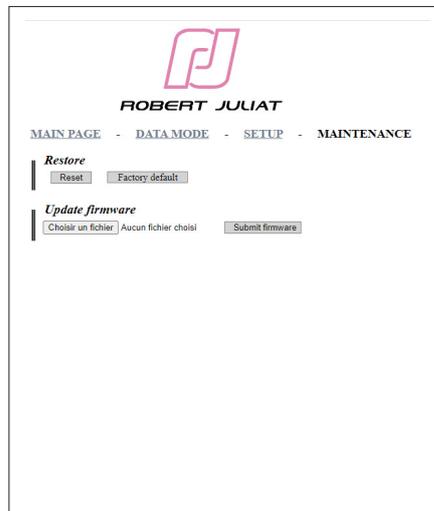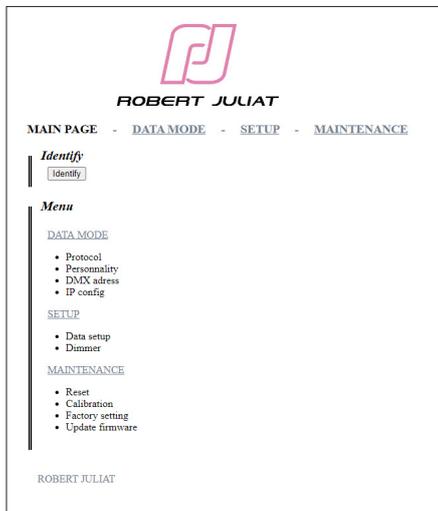

8. Click on "MAINTENANCE"
9. Upload your firmware file (.upd2) in the "Update firmware" section and then click on 'Submit firmware'
10. When the update is completed, the Arthur shows the new firmware version

## 6.5 Factory defaults

Select *FACTORY DEFAULT* in the main menu to reset all values and parametres